



EN (English) original instructions

Instruction manual Automatic forced draught burner

DUO-block | Low NOx



Burner type

VGI-sXXXX DUO-block for gaseous fuels
VGOI-sXXXX DUO-block for gaseous and liquid fuels
VOI-sXXXX DUO-block for liquid fuels

Original instructions

The original manual is written in UK English. All other language versions are translations of the original manual.

Copyright

All rights reserved © 2020Vitotherm BV.

No part of this publication may be reproduced and/or published by print, photoprint, microfilm or any other means without the written consent of Vitotherm BV.

Disclaimer of liability

The manufacturer cannot be held responsible for personal injury, damage to the burner or property damage caused by incorrect use, foreseeable misuse or failure to follow the instructions in this manual. This also applies to unauthorised modifications of the burner and the use of non-approved spare parts, tools or accessories.

The manufacturer reserves the right to modify this manual without notification beforehand.

Customer service

Our customer service department is available 24 hours a day to provide any required technical information and support.

Please have the burner plate information of the burner available when you contact our customer service department (see 83.9).

+31 (0) 15 369 47 57

Warranty

The equipment supplied by Vitotherm has a one-year warranty covering materials from date of commissioning against defective parts, limited to the delivery of parts only. Warranty is only valid when the installation has been realised in accordance with our instructions and commissioning is executed by a Vitotherm engineer or by Vitotherm authorised personnel.

During the period of the warranty any failures to Vitotherm equipment will be repaired within 10-14 days. Our local service expert for future regular maintenance will be at our daily rate.



Table of Contents

1	Introduction	3	4.5	Installing the combustion air fan	48
1.1	About this document	3	4.6	Installing the boiler thermostat set	50
1.2	Relevant documentation	3	4.7	Electrical connections	51
1.3	Symbols and labels	3	4.8	Installing the gas line adapter	51
1.4	Used terms and definitions	4	4.9	Installing the Vitopack	53
1.5	Conformity	4	4.10	Installing the oil pump or firing set	56
2	Safety	7	5	Commissioning	61
2.1	Introduction	7			
2.2	Intended use	7	6	Operation	63
2.3	Reasonably foreseeable misuse	7	6.1	Control panel	63
2.4	Qualification of personnel	8	6.2	Frequency drive	65
2.5	Protective measures	8	6.3	Emergency shut down	65
2.6	Residual risks	9			
2.7	Warning labels	10	7	Troubleshooting	67
2.8	Emergency measures	11	7.1	Left module	67
2.9	Safety precautions	12	7.2	Middle module	68
3	Design and function	15	8	Maintenance	71
3.1	Wind box & combustor	16	8.1	Pre-emptive parts replacement schedule	71
3.2	Combustion air fan	17	8.2	Annual Periodic Maintenance	72
3.3	Air duct	17	8.3	Maintenance of the burner	74
3.4	Combustor	18			
3.5	Gas train (< 500 mbar)	18	9	Decommissioning and disposal	79
3.6	Control panel	19	9.1	Decommissioning	79
3.7	Boiler thermostat set	20	9.2	Dismantling the burner	79
3.8	Oil pump	21	9.3	Disposal	79
3.9	Modulating oil firing set	22			
3.10	Optional components	23	10	Transport and storage	81
3.11	Burner plate	30	10.1	Transport	81
3.12	Combustion air fan plate	30	10.2	Storage	84
3.13	Dimensions	31			
3.14	Performance data	33	Apper	ndices	85
			Α	Burner system overview	85
4	Installation	39	В	Declaration of conformity	86
4.1	Checking the delivery	39	C	Performance data (Imperial)	87
4.2	Installing the combustor	40	D	Checklist Periodic Maintenance	91
4.3	Installing the wind box	44	Ε	Ignition electrodes spacing	92
4.4	Installing the air duct	47			





1 Introduction

1.1 About this document

This manual contains instructions and safety information for operation, installation, commissioning and maintenance of the Vitotherm Automatic forced draught burner.

This manual is intended for:

- the owner of the burner system;
- the worker that operates the burner system;
- the qualified technician that performs the installation of the burner system;
- the engineer that is authorized by Vitotherm to perform (re)commissioning, adjustments, troubleshooting, maintenance and repairs of the burner system.

1.2 Relevant documentation

This manual contains references to external documents that are part of the burner's technical file:

NOTICE The technical file is provided on a USB-drive, located inside the control panel.

- Order confirmation; a document that contains essential information about your specific burner system configuration
- Electrical wiring diagram
- OEM manuals & documentation
- Commissioning report
- Installation overview; a 3D drawing of the setup of your specific burner system configuration

1.3 Symbols and labels

1.3.1 Safety warnings

This manual contains safety warnings that may result in injury when ignored. Each safety warning is indicated with a signal word. The signal word corresponds with the level of risk of the described hazardous situation:

Signal word	Level of risk	If not avoided
ADANGER	High	Will result in death or serious injury
AWARNING	Medium	Could result in death or serious injury
A CAUTION	Low	Could result in moderate or minor injury

Safety warnings given at the start of a section apply to the entire section.

Format example of a safety warning:

AWARNING

Contact with live parts can cause electric shocks, burns or even death.

- ▶ Only perform work on electrical equipment if you are an authorised electrician.
- ▶ Before you start working on electrical equipment: Switch off and lock out the power supply isolator and verify that no voltage is present.

Safety warnings at the start of a section, apply to the entire section.

1.3.2 Notices

Messages that are not hazard-related are indicated with the signal word **NOTICE**. These messages do not have a safety alert symbol.

Format example of a message that is not hazard-related:



Operating the engine at an oil level below the minimum limit value can damage the engine.

Regularly check the oil level and refill when necessary.

1.3.3 Other symbols



This symbol identifies a reference to an external document, such as an OEM manual.

1.4 Used terms and definitions

Term	Definition
Burner	DUO-block burner unit which includes the combustion air fan, wind box and combustor.
Combustion air fan	The unit that contains the fan and fan motor.
Wind box & combustor	The unit that contains the combustor. This unit is connected to the combustion air fan with an air duct.
Burner system	Complete burner assembly as delivered, including gas train, control panel and optional components.
Boiler	The heating appliance to which the burner system is connected. A water boiler is the most common type of heating appliance and will be used as the main example in this document.
Boiler house	The building in which the burner system and boiler are installed.
OEM manual	User manual of the original equipment manufacturer.

1.5 Conformity


Vitotherm gas burners carry the CE and EAC marks as a proof of compliance to the following EU directives. See Appendix B for the full declaration of conformity:

- 1. GAR 2016-426-EU
- 2. MD 2006-42-EG
- 3. PED 2014-68-EU

- 4. EMC 2014-30-EU
- 5. LVD 2014-35-EU
- 6. CE-PIN: 2009/142/EC



Notes	

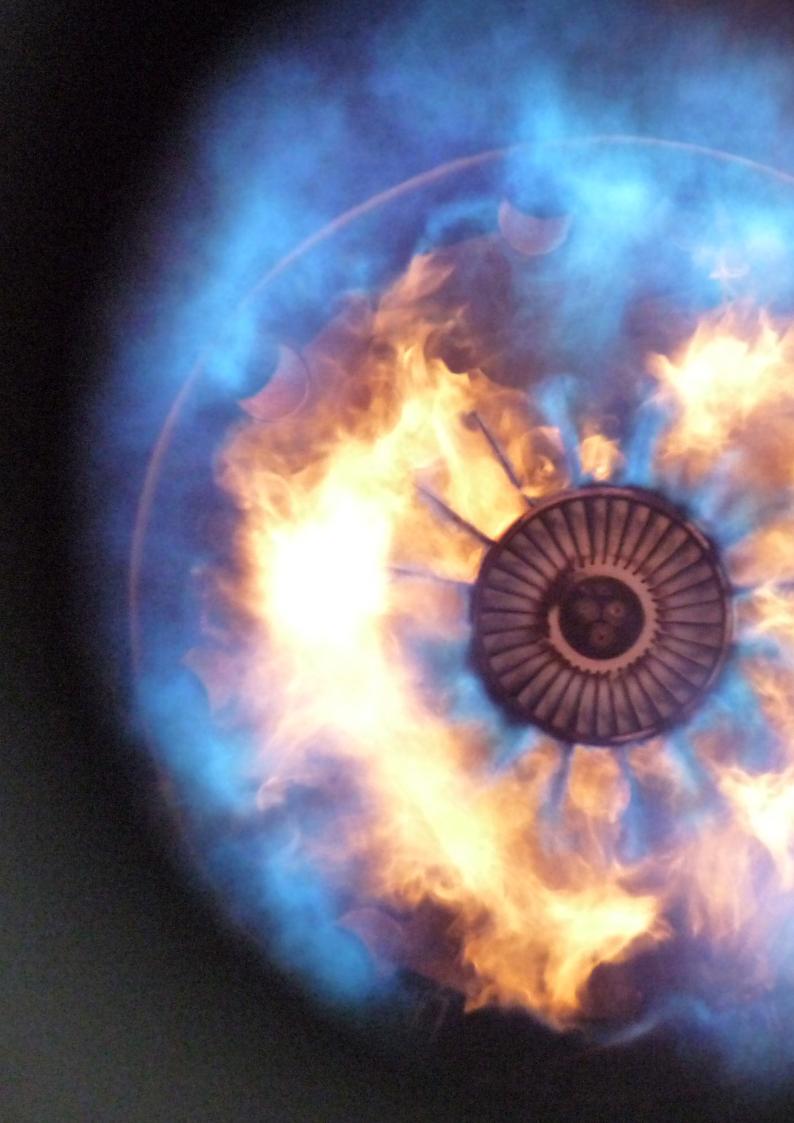



2 Safety

2.1 Introduction

Observe the instructions in this manual before you start working with the burner. If you fail to follow the instructions from this manual you can put persons, surroundings, the environment and the burner at risk. Store this manual in an accessible place near the burner for future reference.

- Always comply with the information, such as labels and the burner plate, attached directly to the burner and keep the information in a legible condition.
- ► Always comply with applicable local laws and regulations.

The burner is equipped with several safety components that ensure safe working with the burner.

2.2 Intended use

The Vitotherm Automatic forced draught burner is a burner for intermittent firing and continuous firing of a boiler or other heating appliance.

The range of applications and type of fuels that the delivered burner type can handle are explained in the Declaration of Conformity. Other fuels must be confirmed by Vitotherm BV.

- The burner must only be operated with the type of fuel as indicated on the burner plate and in the order confirmation.
- The fuel supply pressure must not exceed the pressure given on the burner plate.
- The burner must not be operated outside its operating range (see load values on the burner plate).
- The burner must only be used for an application in compliance with the requirements in the order confirmation.
- The burner must only be used under ambient conditions in compliance with the requirements in the order confirmation.
- The burner must only be used in compliance with applicable local laws and regulations.

Safe use of the burner is only guaranteed if it is used as intended.

2.3 Reasonably foreseeable misuse

The following is considered foreseeable misuse:

- Operation and use of the burner that deviates from the intended use as described in the previous section.
- Failure to comply with the instructions in this manual.
- Failure to eliminate faults, malfunctions or defects of the burner that impose safety risks.
- Failure to carry out the inspections and maintenance operations as described in this manual.
- Unauthorized removal or modification of parts or safety components of the burner.
- Use of spare parts or accessories that have not been approved by the manufacturer.
- Operation in a closed-off or poorly ventilated room.

2.4 Qualification of personnel

Only authorised personnel is allowed to operate and clean the burner. They must possess the following qualifications:

- are legal of age;
- are familiar with and abide by the safety instructions and sections of this manual related to operating the burner;
- are familiar with and abide by the applicable local, national and international laws and regulations;
- are officially trained and certified by Vitotherm B.V.
- have received adequate training to operate and clean the burner;
- have obtained authorisation to access the burner.

Only authorised technicians are allowed to perform installation and maintenance of the burner. They must possess the following qualifications:

- are legal of age;
- are familiar and abide by the safety instructions and sections of this manual related to installation and maintenance of the human
- are familiar with and abide by the applicable local, national and international laws and regulations;
- are able to recognize the possible dangers of the burner and take the necessary measures to protect persons and property;
- have received adequate training in the safe maintenance of the burner;
- have obtained authorisation to access the burner.

2.5 Protective measures

2.5.1 Personal protective equipment (PPE)

Personnel that operates the burner must equip themselves with the following:

Technicians that install or perform maintenance on the burner must equip themselves with the following:



Wear foot protection



Wear foot protection



Wear eye protection



Wear eye protection



Wear ear protection (above 80 dB).



Wear protective gloves



Wear head protection (during lifting work)



2.5.2 Organizational measures

The owner is responsible for carrying out the necessary organizational measures to ensure safe use. Amongst other measures this is achieved by, but not limited to:

- Training and authorising personnel. Vitotherm is responsible for distributing passwords to authorised personnel only.
- Performing hazard assessments of the complete system that incorporates the burner and informing personnel of the possible dangers and protective measures.
- Performing good housekeeping in the facility that houses the burner.
- Running a preventive maintenance program.

2.6 Residual risks

Despite the safe design and construction of the burner and the prescribed protective measures, the burner poses residual risks. This manual provides safety messages to indicate these risks. The formatting and appearance of safety messages that are dedicated to a particular section or sentence are explained in chapter 1. Overall safety messages are grouped in the following sections.

2.6.1 Combustible materials

AWARNING

The burner system contains pressurized components and piping containing combustible fuels.

- ▶ Install pipework in accordance with the applicable rules and standards.
- Protect pipework against corrosion and mechanical forces.
- ▶ Take fire prevention and control measures in accordance with governmental rules and regulations.
- Provide proper means of emergency escape.
- Store the fuel in accordance with governmental rules and regulations.
- Always consider your own safety, that of others and the risks for the environment that may arise due to fuel escaping.

2.6.2 Combustion process

AWARNING

An incomplete combustion process can produce toxic gases.

- ► Equip the boiler house with properly sized vents. The boiler must have a gas-tight gas flue to the outside in accordance with locally applicable standards.
- ▶ Make sure that the burner is always supplied with sufficient clean combustion air.
- ▶ Do not store or process anything near the air intake vents.
- Make sure that fan opening is never blocked (e.g. by a loose object such as pieces of paper).
- Provide proper means of emergency escape.

Electricity 2.6.3

AWARNING

Contact with live parts can cause electric shocks, burns or even death.

- Only perform work on electrical equipment if you are an authorised electrician.
- Perform the work on electrical equipment in accordance with the local safety standards.
- Do not make changes to the burner system if you are not qualified to do so.
- Before you start working on electrical equipment: Switch off and lock out the power supply and verify that no voltage is present.
- Use fuses that correspond with the installed power of the burner.
- Regularly check the electrical wiring for loose connections and damage and repair them without

2.6.4 Mechanical

AWARNING

The burner system contains moving, pressurized and sharp parts that can crush, cut or hit.

- Do not operate the burner with covers or quards removed.
- Do not operate the burner with missing pipework or components.
- Never touch the air damper box during operation.
- Be aware of sharp edges.

2.6.5 **Temperature**

ACAUTION

The interior parts and surfaces of the burner that reach high temperatures cannot be reached under normal operating conditions.

- Do not expose and/or touch interior parts and surfaces of the burner during operation or shortly after operation.
- Properly isolate hot surfaces of the burner system.

2.7 Warning labels

Always comply with warning labels and information signs on the burner. The warning labels and information signs must be kept legible and must be replaced if necessary. For this purpose, contact the manufacturer.

10



2.8 **Emergency measures**

The following emergency situations require special measures to be taken:

2.8.1 Gas leak

For VGI or VGOI

The smell of gas nearby the burner can indicate a leak in the gas supply of the burner system.

AWARNING

Gas leaking from the burner system is highly flammable.

- Switch off or remove any potential sources of ignition when a potential gas leak is detected.
- No smoking! Avoid open flames and sparks.
- Open doors and windows of the boiler house.
- ► Close the gas shut-off valve.
- Shut down the burner system.

To fix a gas leak:

Use gas leak spray or a gas detection device to trace/detect the leak.

NOTICE Gas leaks usually occur at the gaskets or couplings of the gas train.

If the leak occurs at a gasket or coupling:

- Switch off the gas supply.
- Replace the gasket or coupling.
- Tighten all nuts, bolts and flanges.
- Apply a soap solution to the new gasket or coupling.
- 5. Pressurize the gas train.
- Check for any soap bubbles.

2.8.2 Oil leak

For VOI or VGOI

Oil leaks can be dealt with similarly to gas leaks. The main difference is that oil leaks can be visually detected.



Oil flows through the installation at pressures of up to 30 bar.

Always keep a safe distance from an oil leak.

2.8.3 Fire

When fire is detected on or around the burner, take the following measures:

AWARNING

Fires on or around a burner system can lead to a gas explosion.

▶ Always store a fire extinguisher close to the burner.

- 1. Call the emergency number.
- 2. Use the control switch on the control panel to close the fuel supply to the burner.
- 3. Use the manual emergency shut-off switch outside the boiler house to close the gas supply to the boiler house.
- 4. Use the fire switch outside the boiler house to cut off the power to the burner.

2.9 Safety precautions

A burner system is equipped with several safety components that help prevent dangerous situations.

For more information about safe use of the burner, see chapter 4.



For more information about the integration of the safety components into the system, please refer to the electrical wiring diagram.

2.9.1 Flame sensor

The flame sensor monitors the intensity of the flame. In case the flame intensity does not correspond with the control mode and sequence, the system is switched off and an alarm is activated.

2.9.2 Gas safety valve

The gas safety valve is an integrated hydraulic component that automatically closes the fuel supply when a low intensity or absent flame is detected.

2.9.3 Gas leak detection system

The gas leak detector is an integrated system that checks the gas safety valves for internal leaks via a 2-fase test.

2.9.4 Low water level cut-off system

The low water cut-off system consists of a low water sensor in the boiler and a cut-off relay in the control panel. The sensor is part of the boiler thermostat set (see §3.7).

The cut-off system shuts down the burner when the water level in the boiler is too low.



2.9.5 Max. thermostat

The maximum temperature thermostat (fail safe) boiler shuts down the burner if the water temperature exceeds the boiler design temperature.

The thermostat is part of the boiler thermostat set (see §3.7).

2.9.6 Min. air pressure switch

The minimum air pressure switch shuts down the burner if the produced pressure by the combustion air fan is too low.

The air pressure switch is part of the wind box & combustor (see §3.1).

2.9.7 Proximity sensor

The proximity sensor shuts down the burner if the combustion air fan motor is out of range concerning its rpm. The proximity sensor is located on the fan motor (see §3.2).

2.9.8 Min. & Max. gas pressure switches

The minimum gas pressure switch shuts down the burner if the gas supply pressure is too low. The maximum gas pressure switch shuts down the burner if the gas supply pressure is too high.

The gas pressure switches are part of the gas train (see §3.5).

2.9.9 Manual deaeration valves

For VOI or VGOI

A manual deaeration valve is located on the oil buffer of the modulating oil firing set (see §3.9) and the back-up oil firing set (see §3.10.1). The valve can be opened by hand to reduce the pressure inside the oil buffer.






3 Design and function

The Vitotherm Automatic forced draught burner consists of a DUO-block burner unit and a low NOx burner head. The standard burner system consists of the following components:

NOTICE

The illustrations shown in this manual show a VGOI burner system configuration with a Vitopack, high pressure gas regulator set and an Lamtec control system. Your specific burner system configuration may differ from the illustrations shown in this manual.

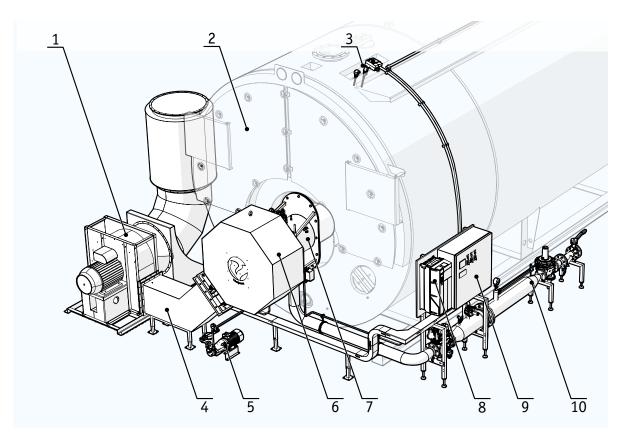


- 1. Combustion air fan
- 2. Boiler
- 3. Boiler thermostat set
- 4. Air duct
- 5. Oil pump (for V(G)OI)

- 6. Wind box
- 7. Combustor
- 8. Frequency drive
- 9. Control panel
- 10. Gas train

The exact configuration of the burner depends on the following factors:

	Autoflame		VGI (gas)				
Control system	Siemens	Fuel type(s)	VOI (oil)				
	► Lamtec		► VGOI (gas & oil)				
Optional components	See §3.10						

3.1 Wind box & combustor

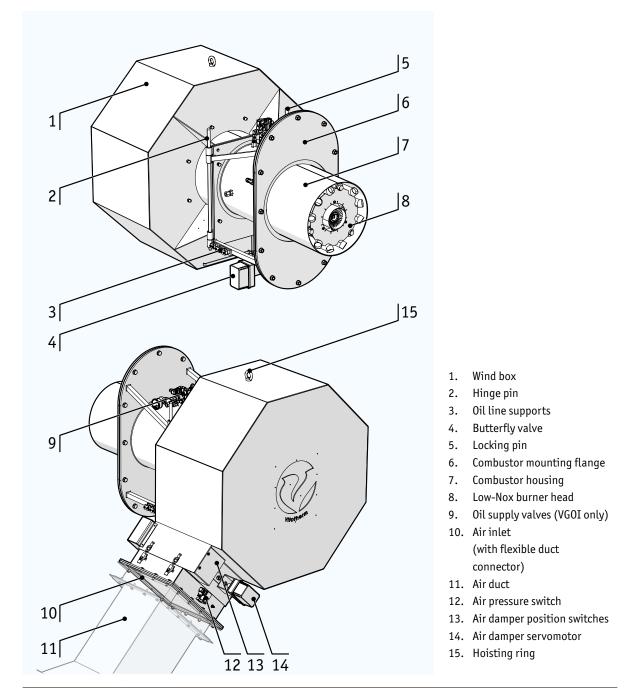


NOTICE

The position of the air inlet may differ, based on the configuration of your burner system. The air inlet can be placed on any of the 8 sides of the wind box.



3.2 Combustion air fan

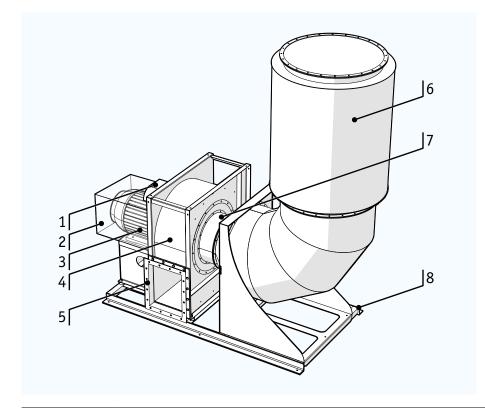


- Junction box electric motor
- Soundproof motor cover
- 3. Fan motor
- 4. Fan housing
- 5. Air outlet
 (with flexible duct
 connector)
- 6. Silencer
- 7. Flexible connector
- 8. Mounting frame

NOTICE

The combustion air fan is also available with a horizontal silencer.

3.3 Air duct

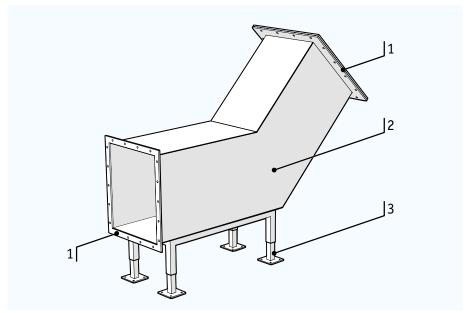


- 1. Mounting flanges
- 2. Air duct
- 3. Adjusting feet

NOTICE

The air duct is custom made for every burner system.

3.4 Combustor

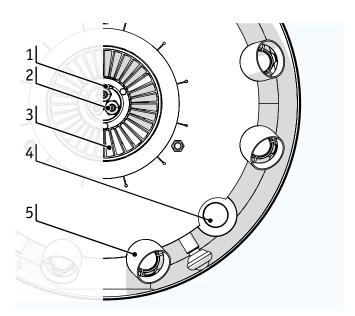

- 1. Ignition pin
- 2. Oil nozzle(s):


burner –		nozzles	
burner	1	2	3
VG0I 100-400		•	
VG0I 450-1250			•
VGOI & VOI (modulating)	•		

- 3. Air swirler pilot flame
- 4. Stabilising gas nozzle
- 5. Gas firing nozzle

NOTICE

For the spacing between the ignition pins, see Appendix E.

3.5 Gas train (< 500 mbar)

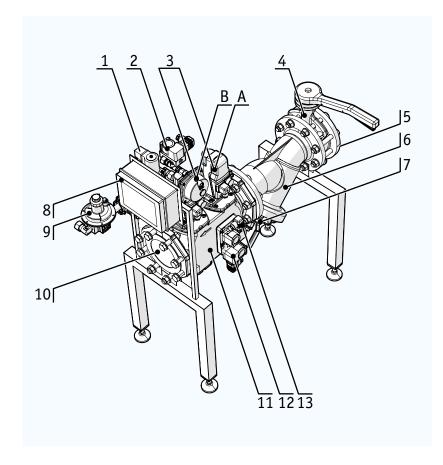


- 1. Pilot gas valve (MK1)
- Gas pressure switch: high (HD)
- 3. Actuators:
 - A. VA1 Open/close
 - B. VA2– Regulator + open/ close
- 4. Butterfly valve
- 5. Gas supply line connection
- 6. Gas filter
- 7. Relief valve
- 8. Junction box
- Gas pilot pressure regulator (DR2)
- 10. Gas line adapter connection
- 11. Safety shut-off valves (double valve block)
- 12. Gas pressure switch: low (LD)
- 13. Gas pressure switch: leak test (LT)



3.6 Control panel

The burner is supplied with a control panel. The control panel is equipped with two displays, operation switches and indicator lights.

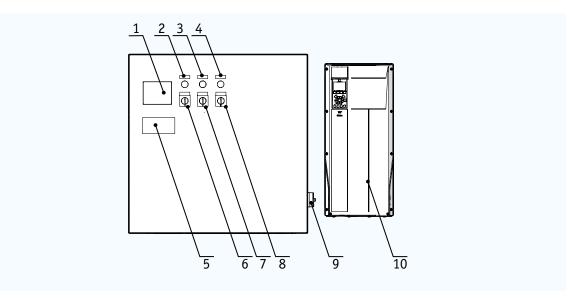

The following switches and lights are available on a standard control panel:

No.	Description		Function						
1	Vitotherm displa	ay	Displays system failures and manufacturer information						
2	Computer functi	onal light	Lights green when the external computer is active						
3	Failure light		Lights red when a system failure is active						
4	Reset button		Resets the complete burner system						
5	Burner managen	nent display	Manual burner controls						
6	Control switch	Computer	Switches control to external computer						
		Off	Switches control off						
		Manual	Switches control to burner management system						
7	Mode switch	Automatic	Switches to automatic burner control						
		Low	Sets the burner to low flame state						
8	Fuel switch	Gas	Selects gas as the fuel supply						
	(VGOI only)	Oil	Selects (modulating) oil as an additional fuel supply.						
9	Main power swit	ch	Activates the control panel						
10	Frequency drive		Controls the speed of the burner fan						

Depending on the configuration of the burner system, the control panel may have additional buttons, lights and displays. For more information, please refer to the electrical wiring diagram.



For more information about the burner management display, please refer to the OEM manual.

3.6.1 Frequency drive

The fan motor is frequency driven. A separate frequency controller is mounted next to the control panel.




For more information and instructions, please refer to the OEM manual or §6.2 of this manual.

3.6.2 Servomotors

The combined control of the gas supply valve and the air damper by servomotors regulate the gas and air flow for the burner. The servomotors have limit switches, which can be used to adjust the stroke rate. If a servomotor reaches the cam limit, it switches off electronically.

3.7 Boiler thermostat set

The boiler thermostat set consists of three components:

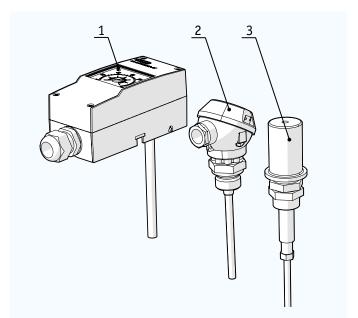

- 1. Max. boiler temperature thermostat
- 2. Temperature sensor (pt100)
- 3. Low water level sensor

The low water level sensor is connected to a cut-off relay in the control panel to form a low water cut-off system (see §2.9).

The boiler thermostat set is not yet installed upon delivery. For installation instructions, see §4.6.



For more information, please refer to the OEM manuals (JUMO).




3.8 Oil pump

For VOI or VGOI

An oil pump can be mounted next to the burner to enable the burner to run on oil for short periods of time. The oil pump is equipped with a mounting frame.

When this option is present in the system, a fuel control switch is added to the control panel.

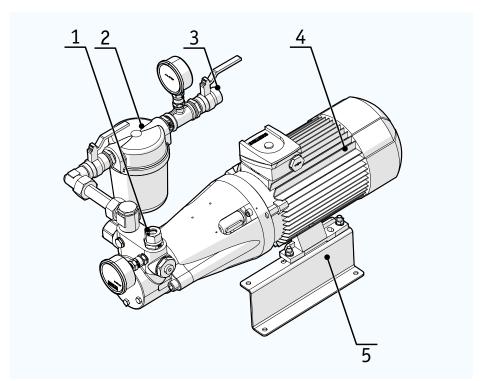


- Burner oil supply connection
- 2. Oil filter
- 3. Oil supply line connection
- 4. Oil pump
- 5. Mounting frame

3.9 Modulating oil firing set

For VOI or VGOI

The modulating oil firing set enables the burner to run partially or completely on oil for long periods of time. The oil supply is automatically controlled based on the return pressure.

When this option is present in the system, a fuel control switch is added to the control panel.

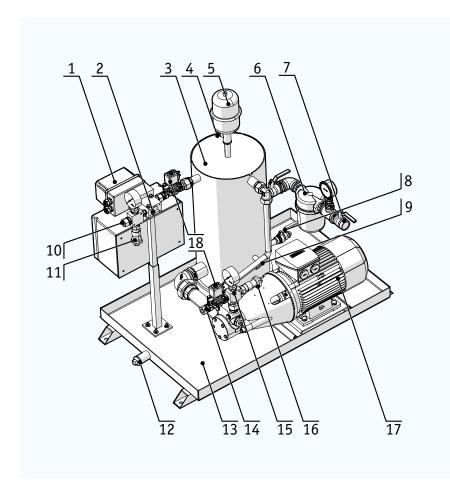

- Return pressure regulator servomotor
- 2. Return pressure regulator valve
- 3. Oil buffer
- 4. Manual deaeration valve
- 5. Expansion vessel
- 6. Oil filter
- 7. Oil supply line connection
- 8. Oil buffer tap
- 9. Burner oil return piston
- 10. Burner oil return connection
- 11. Pressure sensor (max.)
- 12. Leak tray tap
- 13. Leak tray
- 14. Burner oil supply connection
- 15. Pressure/vacuum gauge
- 16. Pressure sensor (min.)
- 17. Oil pump motor
- 18. Solenoid valves



3.10 Optional components


Optional components can be added to the burner to adapt it to special circumstances or add new functions. For an overview of a burner system with all optional components, see Appendix A.

3.10.1 Backup two-stage oil firing set (80%)

For VGOI

The back-up two-stage oil firing set enables the burner to run on oil for short periods of time (max. 48 hours) in emergency situations (e.g. a gas supply malfunction). The back-up set can provide 80% of the burner's regular power.


When this option is present in the system, a fuel control switch is added to the control panel.

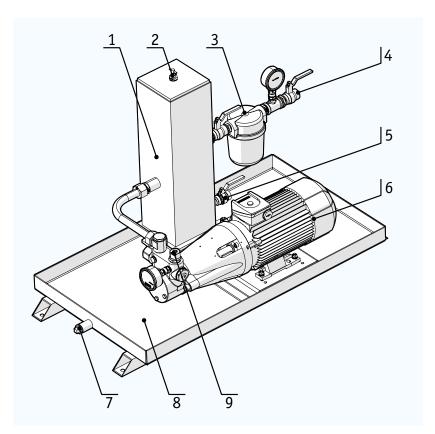

- 1. Oil buffer
- 2. Manual deaeration valve
- 3. Oil filter
- 4. Oil supply line connection
- 5. Oil buffer tap
- 6. Oil pump motor
- 7. Leak tray tap
- 8. Leak tray
- 9. Burner oil supply connection

3.10.2 Vitopack

The Vitopack is a premade installation that integrates a gas train, a gas line adapter with butterfly valve, a control panel and a frequency drive.

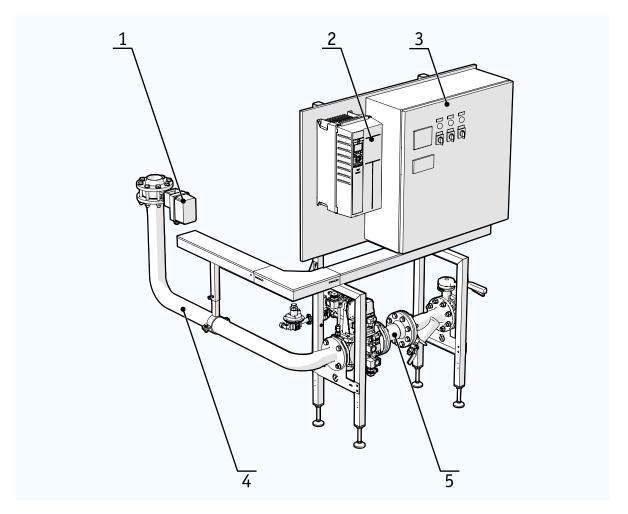

- 1. Butterfly valve
- 2. Frequency drive
- 3. Control panel

- 4. Gas line adapter
- 5. Gas train (<500 mbar)


Vitopack 1 is the standard configuration. Vitopack 2 is also available, and includes a blast tube mounting with refractory and pre-wiring of the boiler. Both configurations come with the option of being fully pre-wired, with connections to all parts of the burner system.



3.10.3 Vitotherm gas line adapter

A Vitotherm gas line adapter connects the gas train to the burner head. Vitotherm offers the option of a custom design that fits your installation.

The gas line adapter is made of powder-coated steel. A standard delivery includes all components necessary for installation (bolts, nuts, rings, gaskets). For instructions on how to install this component, see §4.8.

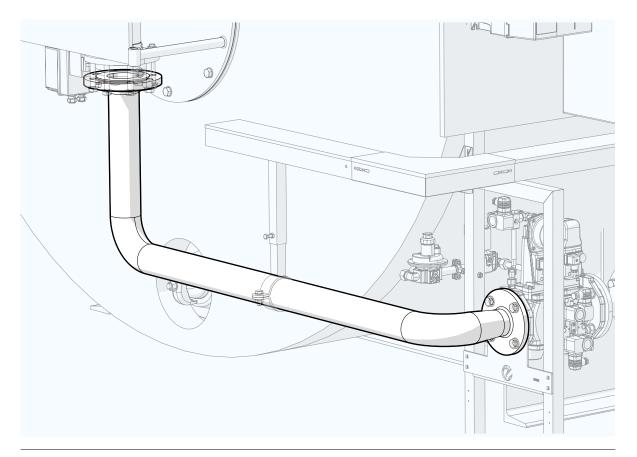


NOTICE

A flexible section can be mounted between the gas line adapter and burner to allow for some movement.

3.10.4 High pressure gas regulator set

4-8 bar to 200-300 mbar

A high pressure gas regulator set can be added to a standard gas train to adapt it to higher gas supply pressures. The set can reduce supply pressures of 4-8 bar to 200-300 mbar.

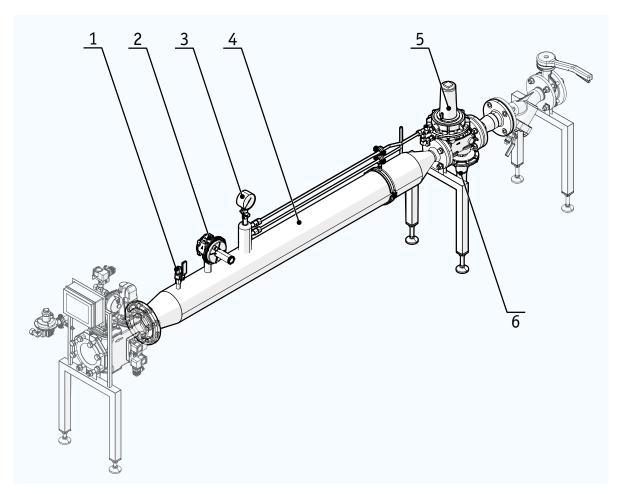


- 1. Relief valve
- 2. Safety pressure relief valve
- 3. Pressure gauge

- 4. Pressure stabilising section (outflow tube)
- 5. Pressure regulator
- 6. Safety shut-off valve




3.10.5 Spareparts set

Two sets of spare parts are available. These sets contains parts of the burner that should be replaced within 1 or 2 years (see §8.1).

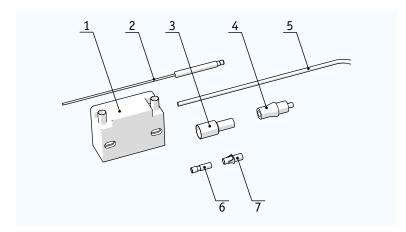

Set 1


- 1. Ignition transformer
- 2. Ignition electrode
- 3. Cable connector (female)
- 4. Cable connector (male)
- 5. Ignition cable
- 6. Ignition cable connector
- 7. Rajah clamp

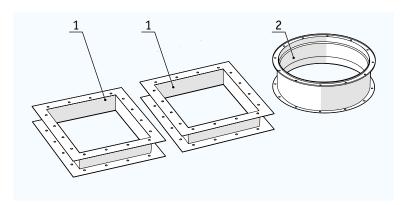

Set 2

- 1. Flexible duct connector (x2)
- 2. Flexible intake connector

3.10.6 Gas train actuator heating elements

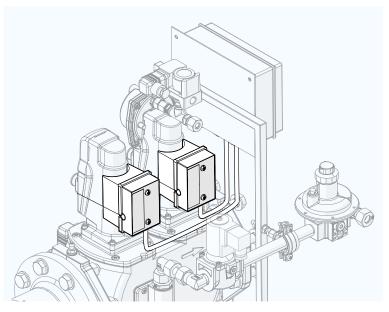

Heating elements can be placed on the actuator of the gas train. The heating elements keep the hydraulic oil in the actuator up to temperature in cold environments. Vitotherm recommends to include this option in an outdoor burner system or in a cold boiler house.


3.10.7 Flue gas valve circuit

A flue gas valve circuit controls the flue gas valve of CO_2 systems equipped with a CO_2 collector with multiple CO_2 sources. The circuit closes the flue gas valve in the flue gas outlet to the CO_2 collector when CO is detected in the flue gas of the system (e.g. when the burner is activated). This prevents CO from entering the CO_2 collector.

3.10.8 Vitotherm CO detector

type VCD2 with sampling pump

A Vitotherm CO detector checks the flue gas that is transported from the burner to external applications (e.g. greenhouses) for carbon monoxide. The CO detector is mounted near the flue gas exhaust.

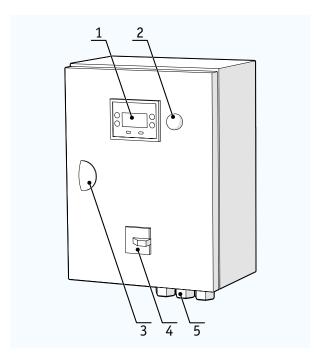

- 1. Interface & display
- 2. Failure feedback light
- 3. Key lock
- 4. Control switch
- 5. Cable connectors



For more information, please refer to the Vitotherm CO detector user manual.

3.10.9 0, controller

LT3-F

An O_2 controller regulates the amount of O_2 that is added to the fuel mixture. This compensates for differences in gas quality (caloric value) and improves the efficiency of the burner.

The O_2 controller can be expanded with a CO controller. This allows the O_2 controller to recognize the O_2 breaking point after which CO is created and adjust the O_2 percentage accordingly.



For more information, please refer to the OEM manual.



3.10.10 Remote access monitoring

Visio Control

A server solution is available that enables remote access to information about the burner (e.g. measurement data, logs, error codes). This enables Vitotherm to monitor the burner and provide improved technical support.

Remote access monitoring is recommended for burners in remote locations.



For more information, please refer to the OEM manual.

3.10.11 Facilities for a one-pass boiler

A one-pass boiler must be equipped with a safety circuit that prevents the flue gases and return water from becoming too cold. This can cause condensation to form in the flue gas pipes, causing corrosion damage.


The safety circuit consists of:

- · Minimum flue gas temperature monitor
- An extra max. boiler temperature thermostat
- An extra low water level sensor

When this option is present in the system, a fuel control switch is added to the control panel.


3.10.12 Seaworthy packaging

If the burner needs to be well protected or shipped overseas, it can be packed in wooden crates treated according to ISPM 15.

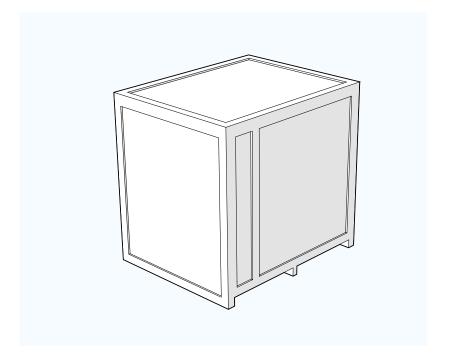

3.11 Burner plate

The burner is marked in accordance with the applicable legislation requirements. The burner plate is located on the wind box and displays key performance data of the burner:

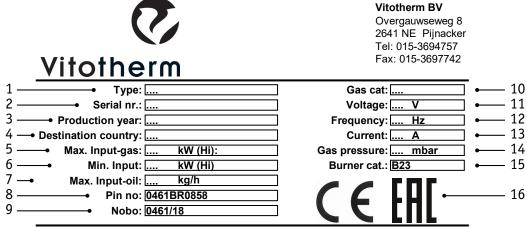

This burner must be installed according to the rules in force, and should be used only in a well ventilated area.

Before the burner is installed and put into operation, the instruction manual must be read.

The electrical part of the burner is built according to the EN 60529, the voltage and amperage is as indicated on the nameplate of the burner.


When servicing the burner the main switch and the gas supply must be switched off at all times

- 1. Burner type
- 2. Serial number
- 3. Year of manufacture
- 4. Country of destination
- 5. Maximum load (kW)
- 6. Minimum load (kW)
- 7. Maximum oil consumption (kg/h)
- 8. Pin number

- 9. Notified body
- 10. Gas category
- 11. Voltage (V)
- 12. Frequency (Hz)
- 13. Current (A)
- 14. Gas pressure (mbar)
- 15. Burner category
- 16. CE and EAC markings

3.12 Combustion air fan plate

The combustion air fan plate is located below the fan motor and displays key performance data of the motor:

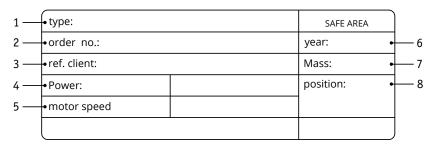

- Fan motor type
- 2. Order number
- 3. Client reference number
- 4. Power (kW) and supply voltage (V~Hz)
- Motor speed (rpm)
- 6. Production year
- 7. Mass (kg)
- 3. Position




3.13 Dimensions


This section contains the standard dimensions of a DUO-block burner. For technical data regarding your specific burner system configuration, please refer to the burner plate (see §3.11) or the order confirmation.

3.13.1 Combustor mounting flange

The combustor must be mounted on a boiler by using a mounting flange. The design and dimensioning of this mounting flange depends on the heating capacity of the burner:

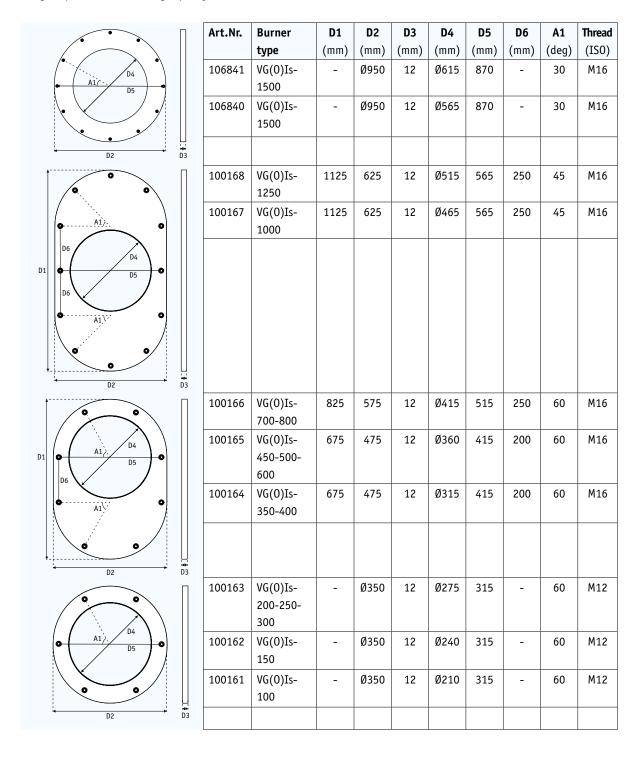

3.13.2 Wind box & combustor

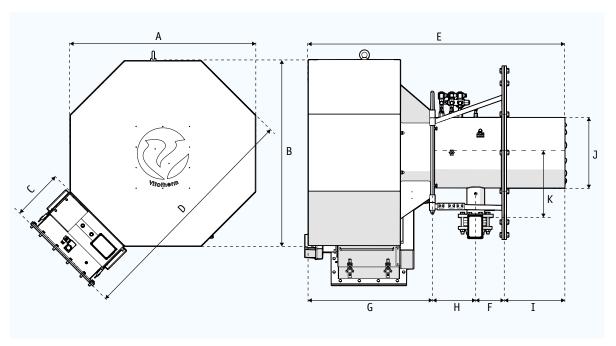

Burner type	A&B	С	D	E	F*	G	Н	I	J	K	Weight	DN/	Housing
	(mm)	(kg)	ANSI	type									
VIs-100	628	318	947	1316	135	496	285	400	Ø201	288	±135	50	DUO 3 Ø261
VIs-150	628	318	947	1316	135	496	285	400	Ø231	300	±137	50	DUO 3 Ø261
VIs-200	628	318	947	1316	135	496	285	400	Ø267	340	±140	50	DUO 3 Ø261
VIs-250-300	824	318	1142	1346	135	526	285	400	Ø267	340	±185	65-80	DUO 4 Ø261
VIs-350-400	1017	318	1335	1382	135	562	285	400	Ø306	360	±280	65-80	DU0 5 Ø345
VIs-450-500	1017	318	1335	1382	135	562	285	400	Ø351	380	±280	65-80	DU0 5 Ø345
VIs-600	1208	318	1526	1523	135	703	285	400	Ø351	380	±360	65-80	DUO 6 Ø400
VIs-700-800	1208	318	1526	1523	135	703	285	400	Ø406	410	±375	65-80	DUO 6 Ø400
VIs-1000	1208	318	1526	1639	185	769	285	400	Ø456	420	±410	100	DUO 6 Ø500
VIs-1250	1208	318	1526	1639	185	769	285	400	Ø506	445	±410	100	DUO 6 Ø500
VIs-1500	1401	318	1719	1641	185	771	285	400	Ø556	428	±430	125	DUO 7 Ø550
(55 - 110 kW)													
VIs-1500	1401	318	1719	1770	185	900	285	400	Ø606	453	±460	125	DUO 7 Ø600
(132 kW)													

^{*}Excluding the packaging

NOTICE

The position of the air inlet may differ, based on the configuration of your burner system. The air inlet can be placed on any of the 8 sides of the wind box.

3.13.3 Seaworthy packaging

NOTICE

The packaging is put together specifically for each project. Contact Vitotherm to learn more about the packaging dimensions for your order.



3.14 Performance data

This section contains the standard performance data of a DUO-block burner in metric units.



For technical data regarding your specific burner system configuration, please refer to the burner plate (see §3.11) or the order confirmation. For performance data in imperial units, please refer to Appendix C of this manual.

3.14.1 DUO-block low NOx gas burner

	Boiler ca (n = 93%		Burner input	Control	Gas pressure	Max. boiler backpressure	Motor/drive power	Turn down	Gas consumption	Max. height
Туре	MCal	kW	kW	Gas	Mbar	Mbar	kW	Gas	m³	m
VGIs-100	1,000	1163	1250	Modulating	100-300	10	2.2	1:5	122	500
VGIs-150	1,500	1745	1875	Modulating	100-300	10	4.0	1:5	183	500
VGIs-200	2,000	2326	2500	Modulating	100-300	10	4.0	1:5	245	500
VGIs-250	2,500	2908	3125	Modulating	100-300	10	5.5	1:5	306	500
VGIs-300	3,000	3489	3750	Modulating	100-300	12	7.5	1:6	367	500
VGIs-350	3,500	4071	4375	Modulating	100-300	12	7.5	1:6	428	500
VGIs-400	4,000	4652	5000	Modulating	100-300	12	11.0	1:6	489	500
VGIs-450	4,500	5234	5625	Modulating	100-300	12	11.0	1:6	550	500
VGIs-500	5,000	5815	6250	Modulating	100-300	12	15.0	1:7	612	500
VGIs-600	6,000	6978	7500	Modulating	100-300	13	18.5	1:7	734	500
VGIs-700	7,000	8141	8750	Modulating	200-300	14	22	1:8	856	500
VGIs-800	8,000	9304	10000	Modulating	300	15	30	1:8	978	500
VGIs-1000	10,000	11630	12500	Modulating	300	15	37	1:10	1223	500
VGIs-1250	12,000	13956	15000	Modulating	300	15	45	1:10	1468	500
VGIs-1500	15,000	17448	18750	Modulating	300	15	55	1:10	1835	500
VGIs-1500	16,200	18844	20000	Modulating	300	15	75	1:10	1957	500
VGIs-1500	17,500	20356	22000	Modulating	300	15	90	1:12	2153	500
VGIs-1500	19,000	22100	24000	Modulating	300	15	110	1:12	2348	500
VGIs-1500	21,500	25010	27000	Modulating	300	15	132	1:12	2642	500

3.14.2 DUO-block low NOx gas & emergency back-up oil burner

	Boiler capacity		Bu ir			Gas	Max. boiler backpressure	Motor/drive power			Consumption		Max. height
	(n = 93%		Burner input	Control		pressure	oiler sure	/drive power	Turn down		Gas	Oil	ight
Туре	MCal	kW	kW	Gas	0il	Mbar	Mbar	kW	Gas	Oil	m³	kg/h	mtr
V(G)0Is-100	1,000	1163	1250	Modul.	2-stage	100-300	10	2.2	1:5	1:2	122	84	500
V(G)0Is-150	1,500	1745	1875	Modul.	2-stage	100-300	10	4.0	1:5	1:2	183	126	500
V(G)0Is-200	2,000	2326	2500	Modul.	2-stage	100-300	10	4.0	1:5	1:2	245	168	500
V(G)0Is-250	2,500	2908	3125	Modul.	2-stage	100-300	10	5.5	1:5	1:2	306	210	500
V(G)0Is-300	3,000	3489	3750	Modul.	2-stage	100-300	12	7.5	1:6	1:2	367	252	500
V(G)0Is-350	3,500	4071	4375	Modul.	2-stage	100-300	12	7.5	1:6	1:2	428	294	500
V(G)0Is-400	4,000	4652	5000	Modul.	2-stage	100-300	12	11.0	1:6	1:2	489	336	500
V(G)0Is-450	4,500	5234	5625	Modul.	2-stage	100-300	12	11.0	1:6	1:2	550	378	500
V(G)0Is-500	5,000	5815	6250	Modul.	2-stage	100-300	12	15.0	1:7	1:2	612	420	500
V(G)0Is-600	6,000	6978	7500	Modul.	2-stage	100-300	13	18.5	1:7	1:2	734	504	500
V(G)0Is-700	7,000	8141	8750	Modul.	2-stage	200-300	14	22	1:8	1:2	856	588	500
V(G)0Is-800	8,000	9304	10000	Modul.	2-stage	300	15	30	1:8	1:2	978	672	500
V(G)0Is-1000	10,000	11630	12500	Modul.	2-stage	300	15	37	1:10	1:2	1223	840	500
V(G)0Is-1250	12,000	13956	15000	Modul.	2-stage	300	15	45	1:10	1:2	1468	1008	500

3.14.3 DUO-block dual fuel low NOx gas & modulating light fuel oil burner

	Boiler capacity		Burner input	Control		Gas pressure	Max. boiler backpressure	Motor / drive power	Turn down		Consu	Max. height	
Туре	MCal	kW	kW	Gas	Oil	Mbar	Mbar	kW	Gas	0il	(m ³)	Oil (kg/h)	m
V(G)0Is-100	1,000	1163	1250	Modu	lating	100-300	10	2.2	1:5	1:5	122	105	500
V(G)0Is-150	1,500	1745	1875	Modu	lating	100-300	10	4.0	1:5	1:5	183	158	500
V(G)0Is-200	2,000	2326	2500	Modu	lating	100-300	10	4.0	1:5	1:5	245	210	500
V(G)0Is-250	2,500	2908	3125	Modu	lating	100-300	10	5.5	1:5	1:5	306	263	500
V(G)0Is-300	3,000	3489	3750	Modu	lating	100-300	12	7.5	1:6	1:5	367	315	500
V(G)0Is-350	3,500	4071	4375	Modu	lating	100-300	12	7.5	1:6	1:5	428	368	500
V(G)0Is-400	4,000	4652	5000	Modu	lating	100-300	12	11.0	1:6	1:5	489	420	500
V(G)0Is-450	4,500	5234	5625	Modu	lating	100-300	12	11.0	1:6	1:5	550	473	500
V(G)0Is-500	5,000	5815	6250	Modu	lating	100-300	12	15.0	1:7	1:5	612	525	500
V(G)0Is-600	6,000	6978	7500	Modu	lating	100-300	13	18.5	1:7	1:5	734	630	500
V(G)0Is-700	7,000	8141	8750	Modu	lating	200-300	14	22	1:8	1:5	856	735	500
V(G)0Is-800	8,000	9304	10000	Modu	lating	300	15	30	1:8	1:5	978	840	500
V(G)0Is-1000	10,000	11630	12500	Modu	lating	300	15	37	1:10	1:5	1223	1050	500
V(G)0Is-1250	12,000	13956	15000	Modu	lating	300	15	45	1:10	1:5	1468	1261	500
V(G)0Is-1500	15,000	17448	18750	Modu	lating	300	15	55	1:10	1:5	1835	1576	500
V(G)0Is-1500	16,200	18844	20000	Modu	lating	300	15	75	1:10	1:5	1957	1681	500
V(G)0Is-1500	17,500	20356	22000	Modu	lating	300	15	90	1:12	1:5	2153	1849	500
V(G)0Is-1500	19,000	22100	24000	Modu	lating	300	15	110	1:12	1:5	2348	2017	500
V(G)0Is-1500	21,500	25010	27000	Modu	lating	300	15	132	1:12	1:5	2642	2269	500



3.14.4 DUO-block modulating light fuel oil burner

	Boiler ca (n = 939		Burner input	Control	Max. boiler back- pressure	Motor / drive power	Turn down	Consumption	Max. height
Туре	MCal	kW	kW	0il	Mbar	kW	0il	Oil (kg/h)	m
V(G)0Is-100	1,000	1163	1250	Modulating	10	2.2	1:5	105	500
V(G)0Is-150	1,500	1745	1875	Modulating	10	4.0	1:5	158	500
V(G)0Is-200	2,000	2326	2500	Modulating	10	4.0	1:5	210	500
V(G)0Is-250	2,500	2908	3125	Modulating	10	5.5	1:5	263	500
V(G)0Is-300	3,000	3489	3750	Modulating	12	7.5	1:5	315	500
V(G)0Is-350	3,500	4071	4375	Modulating	12	7.5	1:5	368	500
V(G)0Is-400	4,000	4652	5000	Modulating	12	11.0	1:5	420	500
V(G)0Is-450	4,500	5234	5625	Modulating	12	11.0	1:5	473	500
V(G)0Is-500	5,000	5815	6250	Modulating	12	15.0	1:5	525	500
V(G)0Is-600	6,000	6978	7500	Modulating	13	18.5	1:5	630	500
V(G)0Is-700	7,000	8141	8750	Modulating	14	22	1:5	735	500
V(G)0Is-800	8,000	9304	10000	Modulating	15	30	1:5	840	500
V(G)0Is-1000	10,000	11630	12500	Modulating	15	37	1:5	1050	500
V(G)0Is-1250	12,000	13956	15000	Modulating	15	45	1:5	1261	500
V(G)0Is-1500	15,000	17448	18750	Modulating	15	55	1:5	1576	500
V(G)0Is-1500	16,200	18844	20000	Modulating	15	75	1:5	1681	500
V(G)0Is-1500	17,500	20356	22000	Modulating	15	90	1:5	1849	500
V(G)0Is-1500	19,000	22100	24000	Modulating	15	110	1:5	2017	500
V(G)0Is-1500	21,500	25010	27000	Modulating	15	132	1:5	2269	500

3.14.5 DUO-block dual fuel low NOx natural gas & propane gas burner

	Boiler ca (n = 93%		Burner input	Control	Gas pressure	Max. boiler backpressure	Motor/drive power	Turn down	Consumption	Max. height
Туре	MCal	kW	kW	Gas	Mbar	Mbar	kW	Gas	Gas (m³)	m
VGIs-100	1,000	1163	1250	Modulating	100-300	10	2.2	1:5	122	500
VGIs-150	1,500	1745	1875	Modulating	100-300	10	4.0	1:5	183	500
VGIs-200	2,000	2326	2500	Modulating	100-300	10	4.0	1:5	245	500
VGIs-250	2,500	2908	3125	Modulating	100-300	10	5.5	1:5	306	500
VGIs-300	3,000	3489	3750	Modulating	100-300	12	7.5	1:6	367	500
VGIs-350	3,500	4071	4375	Modulating	100-300	12	7.5	1:6	428	500
VGIs-400	4,000	4652	5000	Modulating	100-300	12	11.0	1:6	489	500
VGIs-450	4,500	5234	5625	Modulating	100-300	12	11.0	1:6	550	500
VGIs-500	5,000	5815	6250	Modulating	100-300	12	15.0	1:7	612	500
VGIs-600	6,000	6978	7500	Modulating	100-300	13	18.5	1:7	734	500
VGIs-700	7,000	8141	8750	Modulating	200-300	14	22	1:8	856	500
VGIs-800	8,000	9304	10000	Modulating	300	15	30	1:8	978	500
VGIs-1000	10,000	11630	12500	Modulating	300	15	37	1:10	1223	500
VGIs-1250	12,000	13956	15000	Modulating	300	15	45	1:10	1468	500


	Boiler ca (n = 93%		Burner input	Control	Gas pressure	Max. boiler backpressure	Motor/drive power	Turn down	Consumption	Max. height
Туре	MCal	kW	kW	Gas	Mbar	Mbar	kW	Gas	Gas (m³)	m
VGIs-1500	15,000	17448	18750	Modulating	300	15	55	1:10	1835	500
VGIs-1500	16,200	18844	20000	Modulating	300	15	75	1:10	1957	500
VGIs-1500	17,500	20356	22000	Modulating	300	15	90	1:12	2153	500
VGIs-1500	19,000	22100	24000	Modulating	300	15	110	1:12	2348	500
VGIs-1500	21,500	25010	27000	Modulating	300	15	132	1:12	2642	500

3.14.6 DUO-block tri-fuel low NOx natural gas & propane gas & modulating light fuel oil burner

						Max. boiler backpressure	Motor / drive			Consu	mption	
	Boiler ca (n = 93°	•	Burner input	Control	Gas pressure	Max. boiler ckpressure	/ drive power	Turn d	lown	Gas	Oil	Max. height
Туре	MCal	kW	kW	Gas Oil	Mbar	Mbar	kW	Gas	0il	(m³)	(kg/h)	m
V(G)0Is-100	1,000	1163	1250	Modulating	100-300	10	2.2	1:5	1:5	122	105	500
V(G)0Is-150	1,500	1745	1875	Modulating	100-300	10	4.0	1:5	1:5	183	158	500
V(G)0Is-200	2,000	2326	2500	Modulating	100-300	10	4.0	1:5	1:5	245	210	500
V(G)0Is-250	2,500	2908	3125	Modulating	100-300	10	5.5	1:5	1:5	306	263	500
V(G)0Is-300	3,000	3489	3750	Modulating	100-300	12	7.5	1:6	1:5	367	315	500
V(G)0Is-350	3,500	4071	4375	Modulating	100-300	12	7.5	1:6	1:5	428	368	500
V(G)0Is-400	4,000	4652	5000	Modulating	100-300	12	11.0	1:6	1:5	489	420	500
V(G)0Is-450	4,500	5234	5625	Modulating	100-300	12	11.0	1:6	1:5	550	473	500
V(G)0Is-500	5,000	5815	6250	Modulating	100-300	12	15.0	1:7	1:5	612	525	500
V(G)0Is-600	6,000	6978	7500	Modulating	100-300	13	18.5	1:7	1:5	734	630	500
V(G)0Is-700	7,000	8141	8750	Modulating	200-300	14	22	1:8	1:5	856	735	500
V(G)0Is-800	8,000	9304	10000	Modulating	300	15	30	1:8	1:5	978	840	500
V(G)0Is-1000	10,000	11630	12500	Modulating	300	15	37	1:10	1:5	1223	1050	500
V(G)0Is-1250	12,000	13956	15000	Modulating	300	15	45	1:10	1:5	1468	1261	500
V(G)0Is-1500	15,000	17448	18750	Modulating	300	15	55	1:10	1:5	1835	1576	500
V(G)0Is-1500	16,200	18844	20000	Modulating	300	15	75	1:10	1:5	1957	1681	500
V(G)0Is-1500	17,500	20356	22000	Modulating	300	15	90	1:12	1:5	2153	1849	500
V(G)0Is-1500	19,000	22100	24000	Modulating	300	15	110	1:12	1:5	2348	2017	500
V(G)0Is-1500	21,500	25010	27000	Modulating	300	15	132	1:12	1:5	2642	2269	500



Notes	

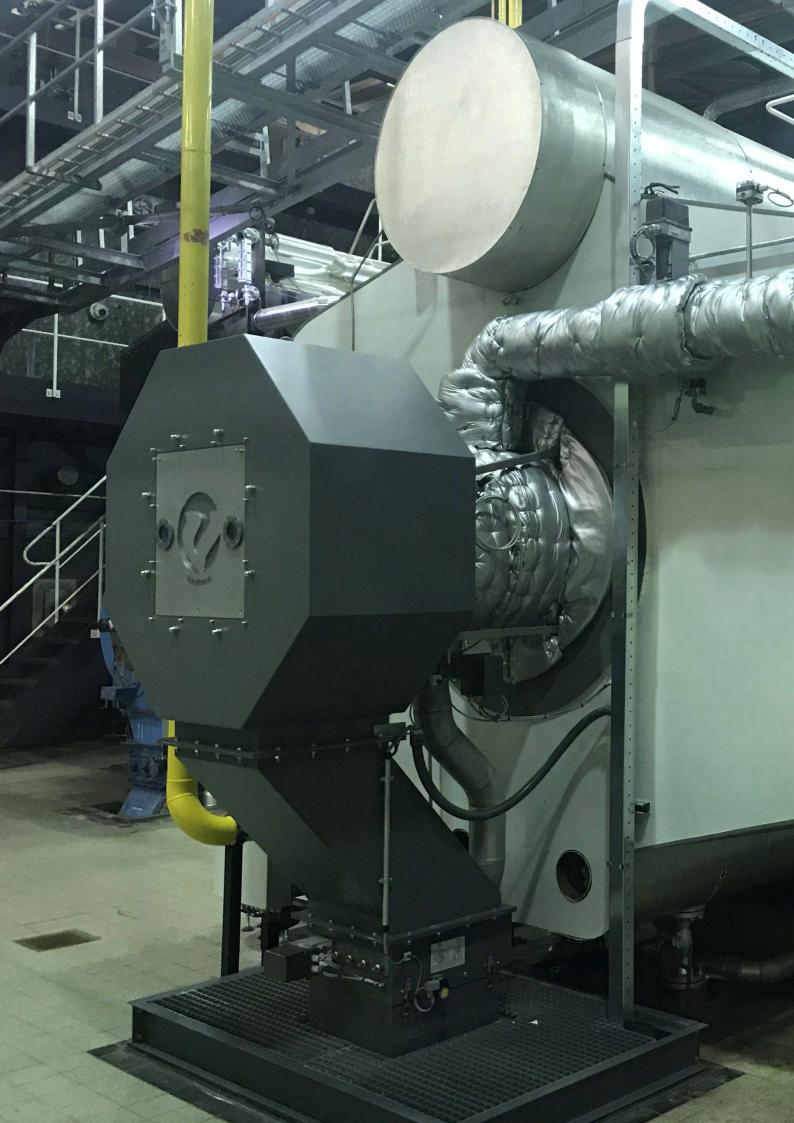



4 Installation

This chapter provides instructions for the basic installation of a burner system onto a boiler or other heating appliance. For information about custom set-ups, please contact Vitotherm.

ACAUTION

The burner system may only be installed by qualified personnel. Handling the burner unit and supporting components without the required knowledge and experience may damage the burner system or cause hazardous situations during installation and use.

AWARNING The burner system may only be installed in a sufficiently ventilated boiler house.

NOTICE

The burner system must always be installed according to national and local laws and regulations.

NOTICE

The components shown in this chapter may differ from your specific burner system configuration.

Checking the delivery 4.1

Required tools:

Forklift truck with adequate lifting capacity.

To check the delivery:

- Transport the crate(s) to an accessible place near the boiler.
- Remove the lid of the crate(s).
- Remove the sides of the crate(s). 3.
- Remove the lashing straps and packaging materials.
- Remove any screws that connect parts to the bottom of the crate(s).
- Check if all parts have been delivered according to the agreed scope. If a part is missing, contact Vitotherm immediately.
- Check all delivered parts for damage.

AWARNING

Damaged parts can affect the correct and safe functioning of the burner system.

- Do not install damaged parts.
- If any parts are damaged upon delivery, please contact Vitotherm.
- Check if the minimum and maximum load of the burner is within the operating range of the boiler. The load values are found on the burner plate of the burner.
- Check if the delivered burner will fit in the designated area of the room. For the dimensions of the burner, see §3.13.

Installing the combustor 4.2

Connection materials:


- Nuts and bolts (19 or 24 mm)
- Gaskets

Required tools:

- Mobile crane with adequate lifting capacity.
- Suitable hoisting sling.
- Ring wrench (19 or 24 mm) or adjustable spanners

To install the combustor:

- Collect the bag with fastener materials that is taped to the combustor.
- Attach a hoisting sling around the combustor pipe section between the connection plates.

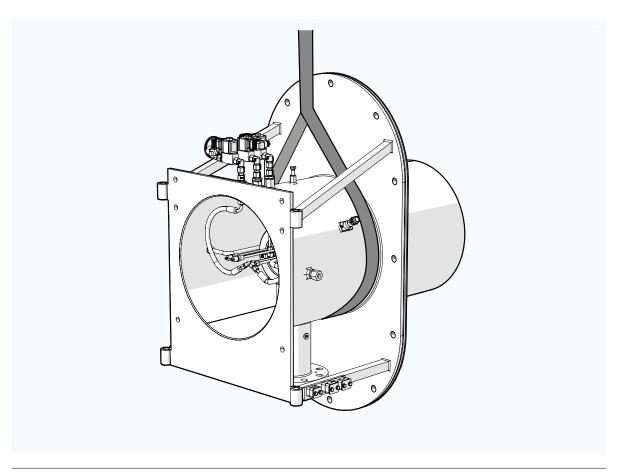

AWARNING

Slings might shift due to hoisting movements, causing unforeseen movement or toppling of the combustor.


Make sure that the sling is trapped in the combustor construction and cannot slide off.

40


Do not attach slings to the open front section of the combustor, where the sling might slide off, or to the reinforcement bars.




- 3. Carefully lift the combustor.
- 4. Place the silicon gasket.
- 5. Carefully place the combustor into the boiler entrance.

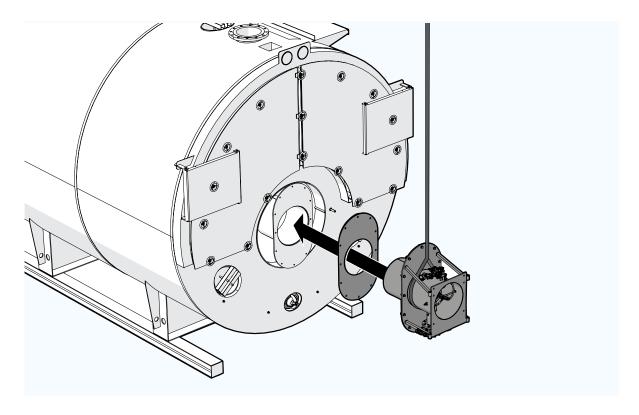


6. Place the provided bolts and loosely tighten them. Use the provided nuts if the flange holes of the boiler are not threaded.

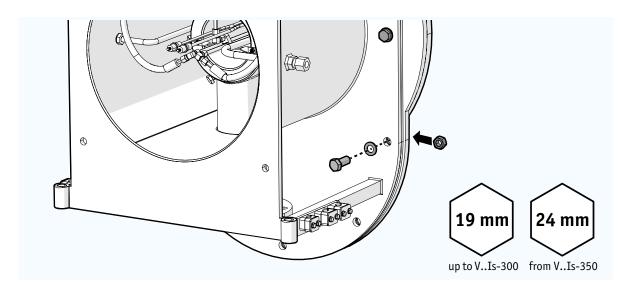

7. Level the combustor.

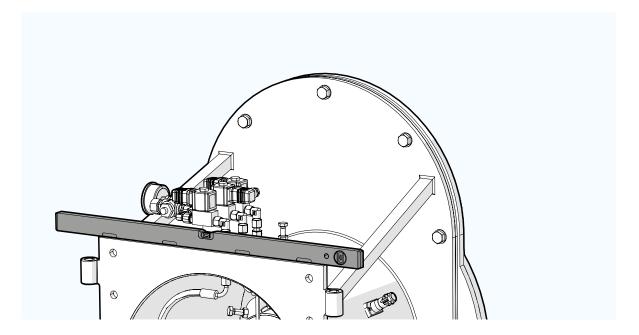

8. Tighten the bolts. Work in a crosswise pattern to make sure the gasket is compressed evenly.

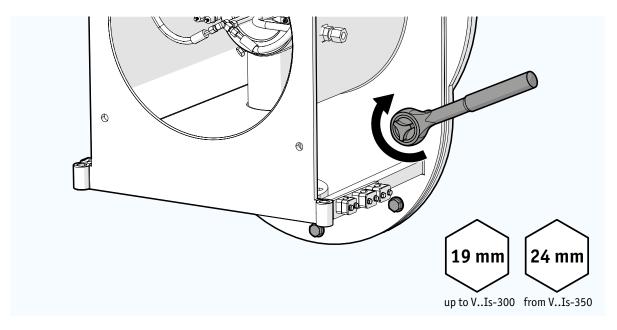


9. Remove the hoisting sling.



10. Inside the boiler, fill the ring-shaped gap between the combustor pipe and the chamber front head with refractory bricks.

NOTICE

Make sure that the refractory does not protrude the end of the combustor pipe. Keep the refractory at a distance of 10 cm inwards.

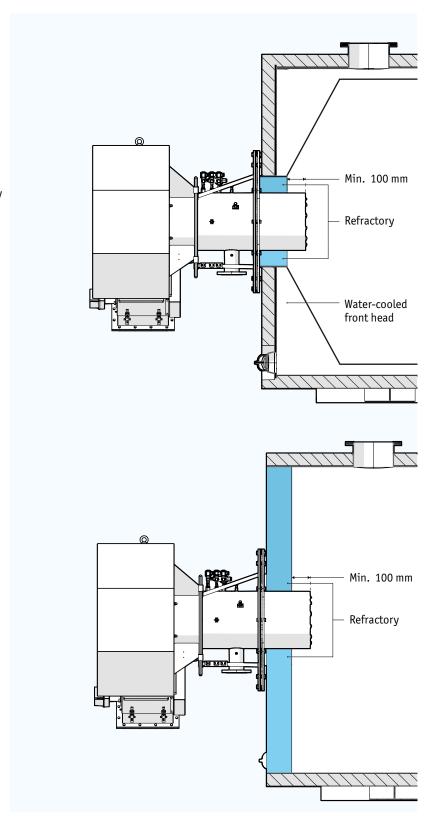


4.3 Installing the wind box

Required tools:

- Mobile crane with adequate lifting capacity
- Ring wrenches or adjustable spanners
- Suitable hoisting equipment

To install the wind box:


- 1. Remove the hinge pin, the locking pin and the bolts.
- 2. Connect your hoisting equipment to the hoisting ring.

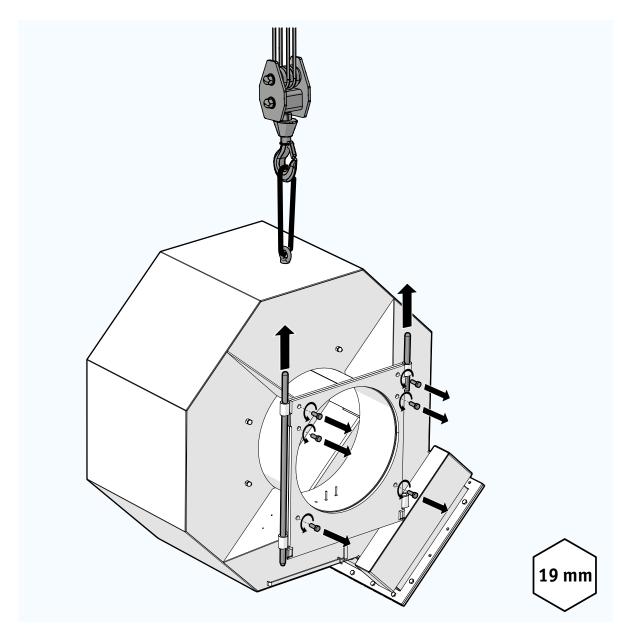


- 3. Carefully lift the wind box close to the boiler.
- 4. Check the designated hinge position (left or right hand) of the wind box (see the installation overview).



5. Carefully align the wind box pivot holes with the pivot holes of the combustor.

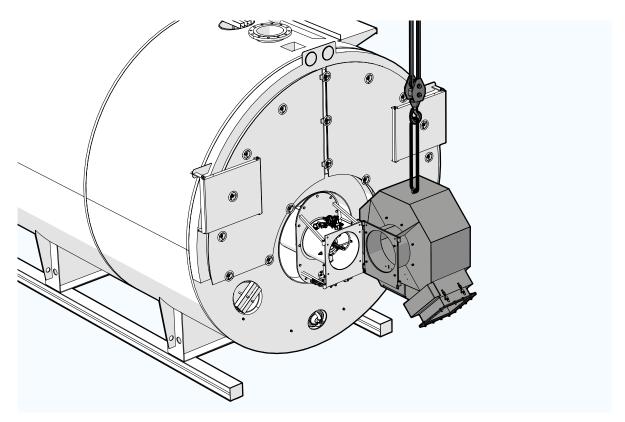


6. Insert the hinge pin through both pivot holes until the locking pin rests on the top of the combustor.

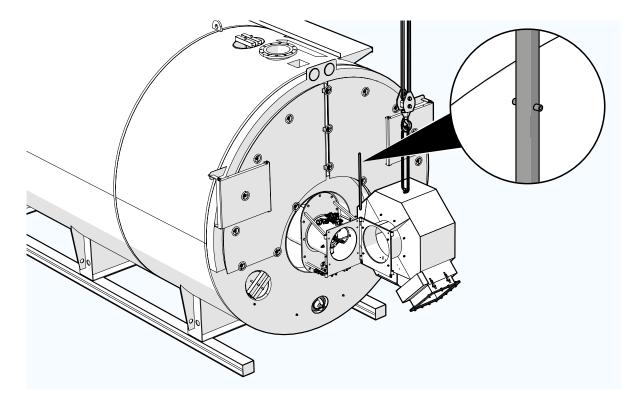


- Connect the ignition cables of the combustor to the wind box. 7.
- Remove the hoisting cables. 8.
- Close the wind box.

NOTICE

Make sure the ignition cable is not trapped between the combustor and the wind box.

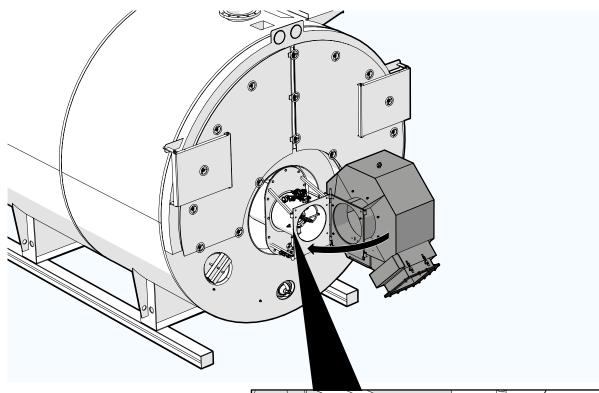

- 10. Place and loosely tighten the six bolts and
- 11. Carefully tighten the bolts more until the pivot holes of both the wind box and the combustor are aligned.
- 12. Insert the locking pin

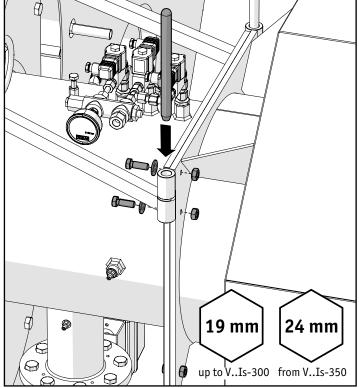




4.4 Installing the air duct

Required tools:


• Ring wrench (17 mm) or adjustable spanners

To install the air duct:

1. Connect the flexible duct connector to the air inlet of the wind box.

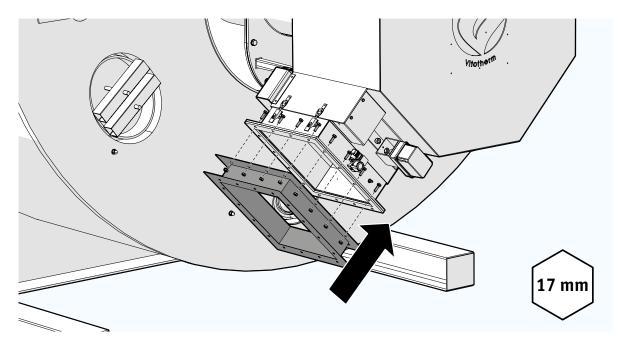

Attach the air duct to to the flexible connector.
 Leave a distance of 100 mm between the air duct and the wind box so the sleeve has room to move.

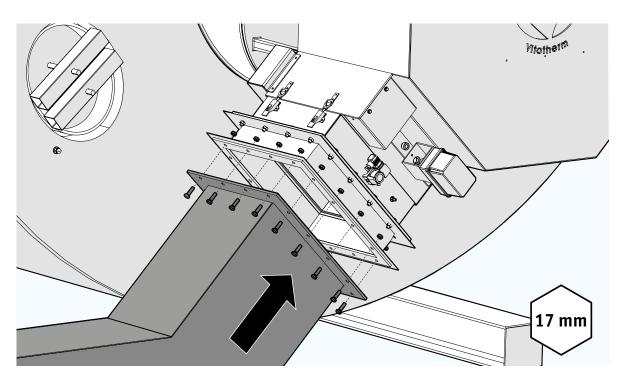


4.5 Installing the combustion air fan

Required tools:


- Mobile crane with adequate lifting capacity
- Ring wrench (17 mm) or adjustable spanners
- Suitable hoisting equipment:
 - D-shackles
 - Round sling

To install the combustion air fan:

1. Connect the flexible duct connector to the air outlet of the combustion air fan.

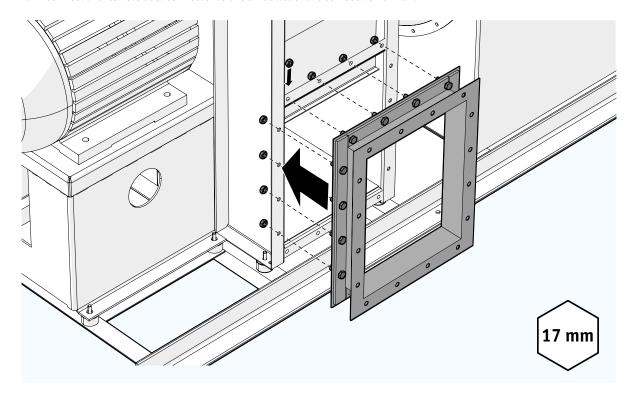


2. Connect your hoisting equipment to the hoisting holes.

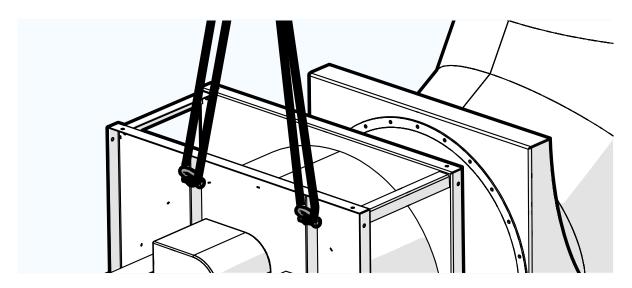




- Carefully lift and place the combustion air fan next to the boiler.
- Align the air outlet of the combustion air fan with the air duct. Adjust the supporting feet of the air duct if necessary.

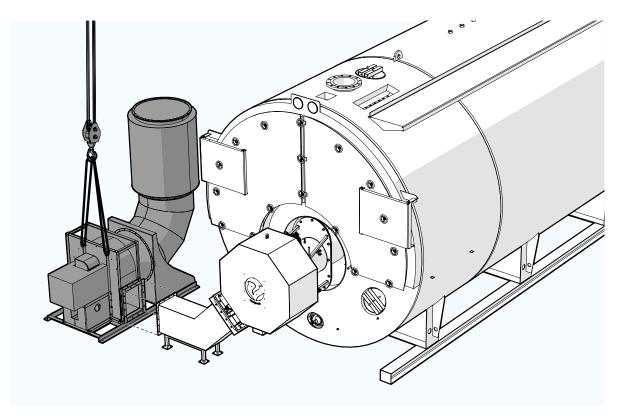


Connect the air duct to the combustion air fan.

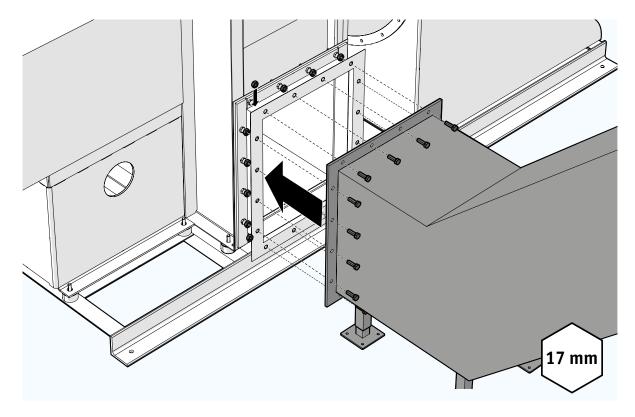

Remove the hoisting equipment.

7. Use anchor bolts to fix the combustion air fan and air duct to the floor.

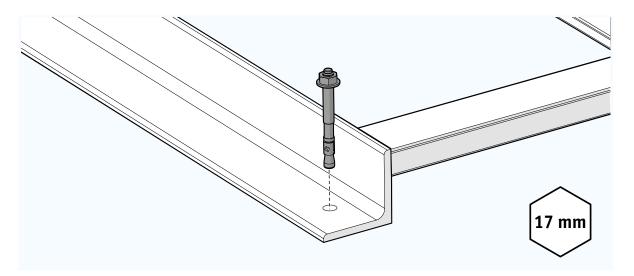


4.6 Installing the boiler thermostat set

The components of the boiler thermostat are installed directly onto the boiler.

To install the boiler thermostat set:

- 1. Connect cabling to each of the components.
- 2. Insert the components into the connection points of the boiler.

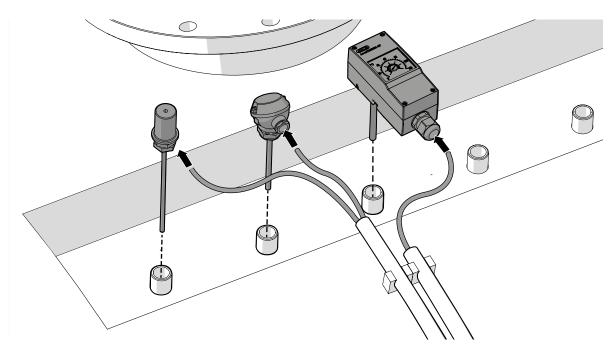

3. Connect the cabling to a junction box. For more information, please refer to the electrical wiring diagram.



For more information, please refer to the OEM manual of each component. \\

50



4.7 Electrical connections

All electric cabling is pre-wired to a junction box in the control panel. During installation, this cabling must be connected to the following components:

- Junction box in the fan housing (see §3.1)
- Boiler thermostat set (see §4.6)
- Junction box on the gas train (see §3.5)



For all electrical connections, the applicable local standards and the connection requirements must be taken into account.



For more information about the electrical connections and integrated circuits, please refer to the electrical wiring diagram.

4.8 Installing the gas line adapter

Optional

The gas line adapter can be installed to connect the gas train to the burner.

Connection materials:


Required tools:

- Nuts and bolts (24 mm)
- Gaskets


Ring wrench (24 mm) or adjustable spanners

To install the gas line adapter:


1. Place a gasket and connect one end of the gas line adapter to the double valve block of the gas train.

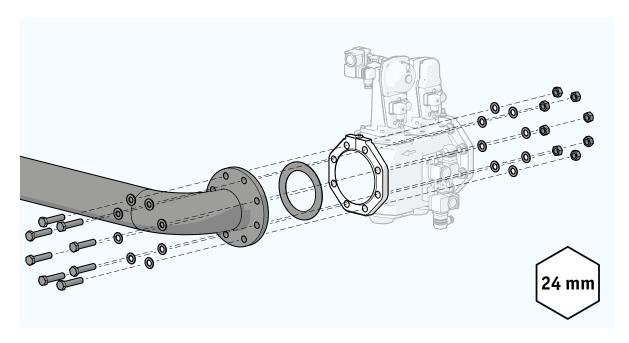

2. If necessary, adjust the height and location of the gas train to align the gas line adapter with the gas inlet on the combustor.

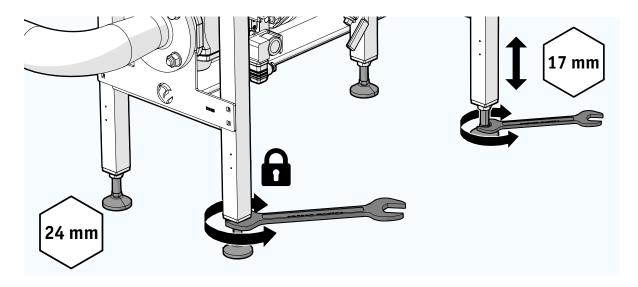

- 3. Disassemble the flange on the gas inlet of the combustor.
- 4. Place two gaskets and connect the other end of the gas line adapter to the combustor.

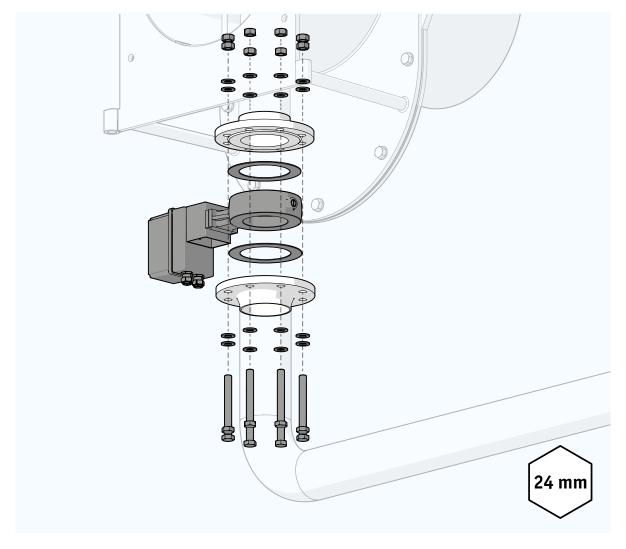



4.9 Installing the Vitopack

Optional

Connection materials:


- Nuts and bolts (24 mm)
- Gaskets
- Gas line (15 mm) and connector pieces

Required tools:

- Mobile crane with adequate lifting capacity
- Suitable hoisting equipment:
 - D-shackles
 - Round sling
- Ring wrench (24 mm) or adjustable spanners

To install the Vitopack:


1. Attach hoisting cables to the hoisting rings on top of the frame.

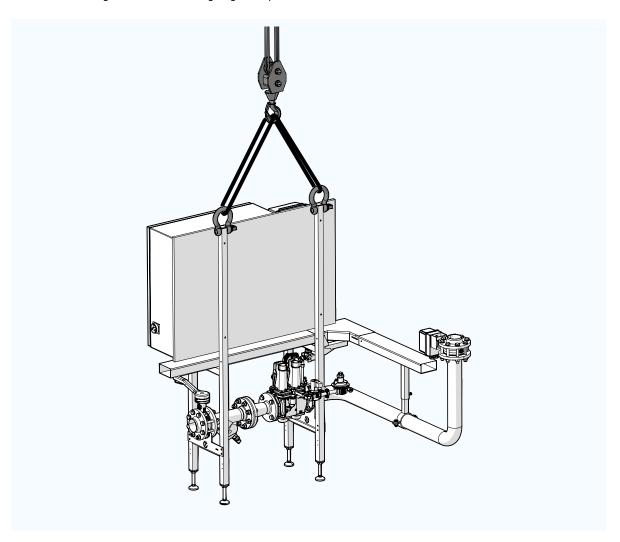


2. Carefully lift the Vitopack.

Place the Vitopack at the designated location, on either side of the boiler.

NOTICE Make sure the gas line adapter aligns with the gas inlet on the combustor.

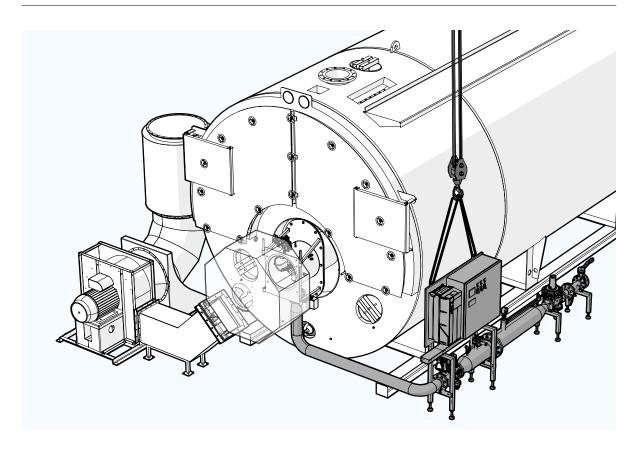


4. Level the Vitopack by adjusting the feet.

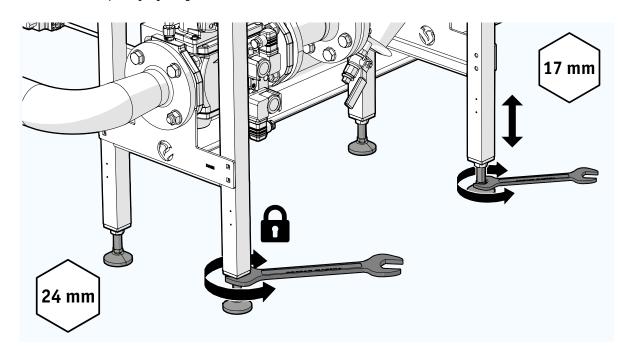



- 5. Remove the placeholder flange from the end of the gas line adapter.
- 6. Connect the gas line adapter to the gas inlet of the combustor. Place gaskets between this connection.

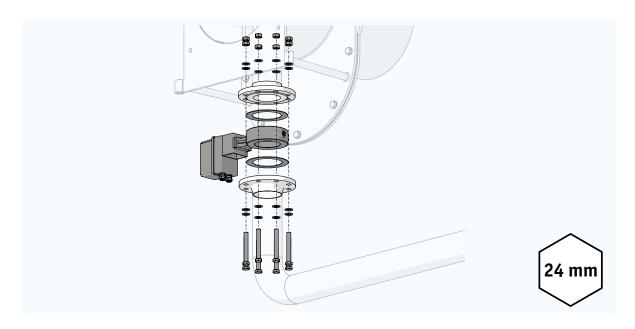


7. Attach the supply pipe to the gas train. Place gaskets between this connection.



Check that the supply line is clean so that the gas filter will not become blocked and that damage to the gas train cannot occur.


8. Install the ignition gas line.

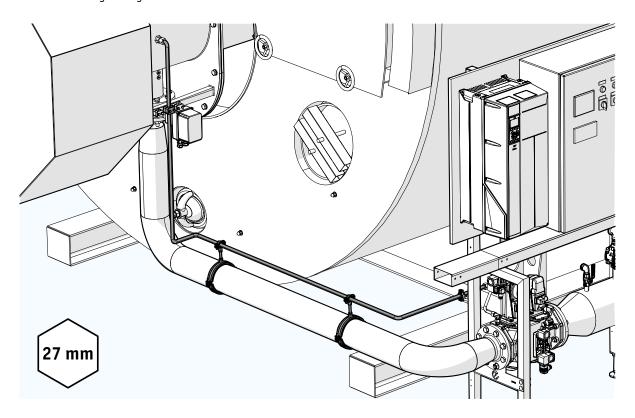

NOTICE

The gas line connection on the combustor can be changed by swapping around the air measure pipe and the pilot gas pipe inside the combustor housing.

- 9. Assemble and install the cable tray.
- 10. If necessary, loosen and adjust the feet on the bottom part of the cable tray.

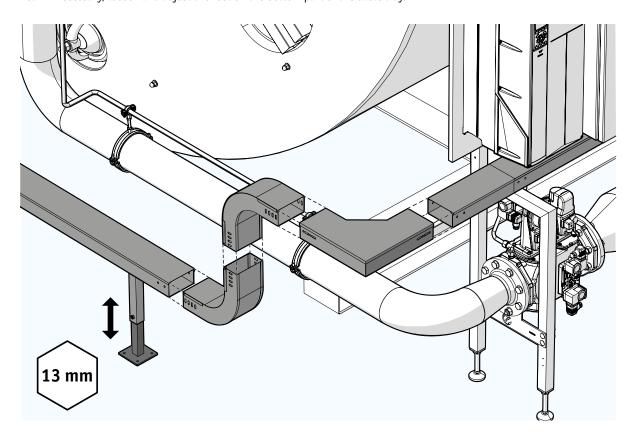

4.10 Installing the oil pump or firing set

Only for VOI or VGOI

This section provides instructions for installing an oil pump or oil firing set (modulating or two-stage back-up).

ACAUTION

The use of unsuitable oil may damage the burner and reduce the quality of the combustion process.

▶ Do not supply a V(G)OI burner with gasoline, crankcase oil or any oil containing gasoline.

Connection materials:

Required tools:

- Oil lines
- Connector pieces


Ring wrenches or adjustable spanners

To install the oil pump or backup two-stage oil firing set:

- 1. Place the oil pump or firing set next to the boiler, within range of the burner.
- 2. Connect the oil line to the oil supply line connection of the oil pump.
- 3. Connect the other end of the oil line to an external oil supply.




4. Connect the oil line to the burner oil supply connection of the oil pump.

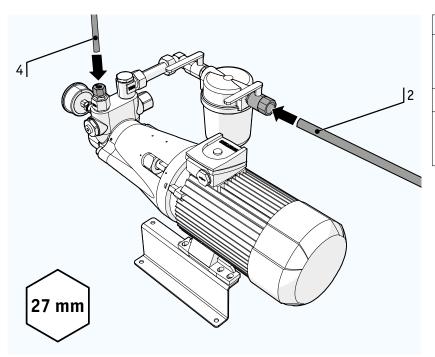


(Oil line	Inner diameter				
No.	Name	VIs	VIs			
		100-	600-			
		500	1250			
2	Oil supply	1/2"	3/4"			
4	Oil supply	15 mm				
	to the					
	burner					

- 5. Connect the other end of the oil line to the combustor.
- 6. Fix the oil line in one of the oil line supports on the frame of the combustor.

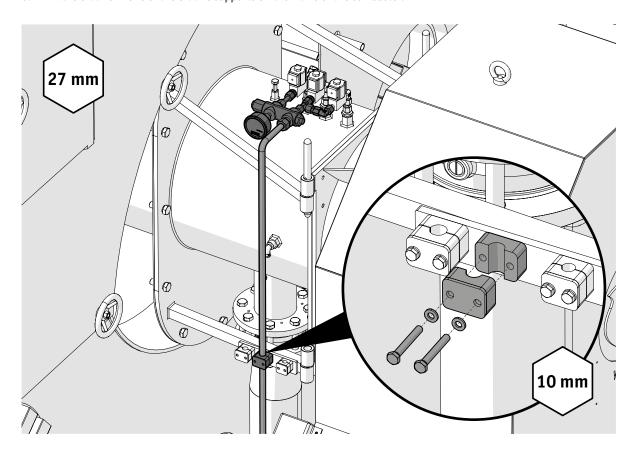

To install the **modulating oil firing set**:


- 1. Place the firing set next to the boiler, within range of the burner.
- 2. Connect the oil line to the oil supply line connection of the oil pump.
- 3. Connect the other end of the oil line to an external oil supply.
- 4. Connect the oil supply line to the burner to the burner oil supply connection of the oil pump.
- 5. Connect the oil return line from the burner to the burner oil return connection.
- 6. Connect the oil return piston line to the burner oil return piston connection.
- 7. Connect a tap line to the oil buffer tap connection.

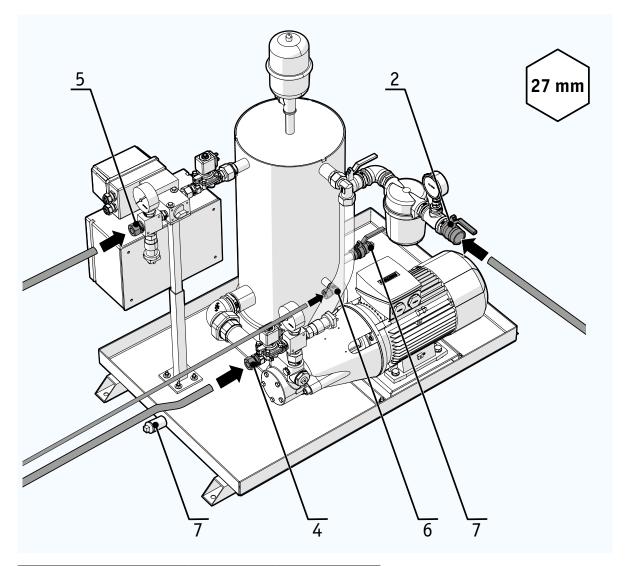

	Oil line	Inner diameter				
No.	Name	VIs-100-500	VIs-600-1500			
2	Oil supply	1/2"	3/4"			
4	Oil supply to the burner	1:	5 mm			
5	Oil return from the burner	15	5 mm			
6	Oil return piston	1:	2 mm			
7	Buffer tap		1/2"			



- 8. Connect the modulating oil firing set to the combustor:
 - a. Connect the oil supply line.
 - b. Connect the oil return line.
 - c. Connect the oil return piston line.
- 9. Fix the oil lines in the oil line supports on the frame of the combustor.

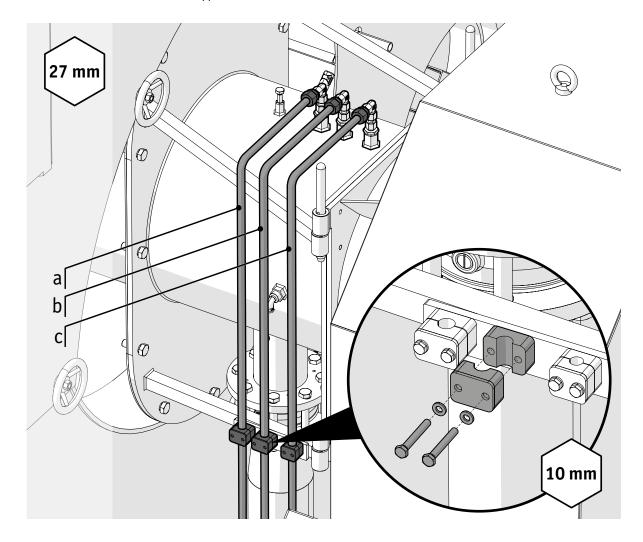





5 Commissioning

Before commissioning the burner system, make sure it meets the requirements below. All mechanical screw connections (e.g. gas/oil line, flange connections, oil valves, electrical terminals) **AWARNING** must be retightened prior to commissioning. **AWARNING** All components must be sealed with an appropriate sealant prior to commissioning. **NOTICE** Commissioning of a Vitotherm installation may only be performed by certified personnel. A commissioning report is created after the burner system has been successfully commissioned. Keep NOTICE this report near the burner for future reference. ☐ The burner system is completely installed according to the instructions in this manual, including: ☐ Gas- and front pipes Refractory Relief valve discharge tubes Pilot gas tube Regulating pressure pipes Oil pipe lines to pump and burner **Explosion** hatch ☐ Electrical wiring is completed according to the provided electrical wiring diagram, free of errors, so that the electrical pre-start condition circuit (safety chain) is closed. Completion of electrical field wiring to the: ■ Wind box & combustor ☐ Control panel Combustion air fan □ Boiler thermostat set ☐ Gas train Control and safety equipment ☐ Electrical power is available on the boiler, burner, buffer and pumps (if applicable). ☐ The boiler is completely assembled, filled with a sufficient amount of heating medium, vented and ready for use. ☐ The water circuit to the boiler is tested and approved. ☐ Fuel inlet and outlet valves are closed. ☐ Fuel lines are purged free of air. Gas and/or oil pressure is available up to the burner A1 gas/oil valve. ☐ The gas supply pressure does not exceed the maximum permitted gas pressure as indicated on the burner plate (see §3.11). Safety components are functioning correctly and ready for operation (see §2.9). Equipment supplied by third parties that is present in the electrical burner panel (not related to burner control such as the pressure vessel) must be adjusted and programmed. ☐ Sufficient fresh air is available. Flue outlets are not obstructed. ☐ A blow-off facility is present and adjusted to the maximum boiler capacity. ☐ A demand for heat is present in the system. Possibility of heat release is present and controlled/supervised by local site supervisor. ☐ The necessary local work permits are available. Qualified personnel is available for instructions, system transfer and site acceptance test. A safe workspace is available, according to health and safety regulations and realistic common sense.





6 Operation

This chapter describes the main operational procedures of the burner system.

6.1 Control panel

The burner is controlled with the control panel. This panel has several standard control switches and feedback LEDs, as well as controls that can be added to control optional features (e.g. an oil firing set). See §3.6 for an overview of the standard components of the control panel.

6.1.1 Main power switch

The control panel is activated by using the main power switch on the right side of the panel.

6.1.2 Internal components

The control panel can be opened with a key to gain access to:

- Relays and fuses
- A power outlet and modbus connection for a service laptop
- The USB drive with the technical file of the burner system
- This instruction manual

AWARNING

 $Contact\ with\ live\ parts\ can\ cause\ electric\ shocks,\ burns\ or\ even\ death.$

- Only perform work on electrical equipment if you are an authorised electrician.
- ▶ Before you start working on electrical equipment, switch off and lock out the power supply isolator and verify that no voltage is present.

6.1.3 Switching the burner on or off

The burner is switched on or off with the main switch. This switch has three options:

- 1 = Computer: ON automatic controls.
- 0 = 0ff.
- 2 = Lamtec: ON manual controls.

To operate the main switch:


- Set the main switch to 1 to cue the burner system to modulate based on the computer.
- Set the main switch to 2 to enable manual operation via the Lamtec interface.
- Set the main switch to 0 to shut the burner system down.

6.1.4 Manually operating the burner

The burner system can be manually operated via the Lamtec interface on the control panel.



For more information, please refer to the OEM manual.

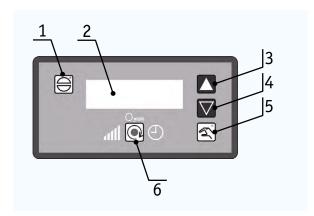

- 1. Reset
- 2. Display
- 3. Load / Fault history up
- 4. Load / Fault history down
- 5. Manual operation on/off
- 6. Display options

6.1.5 Performing a system reset

A system reset must be performed after a failure in the burner or external boiler system has been resolved. This procedure allows the burner system to be put back into operation.

To reset the burner system:

• Press the reset button on the control panel.

6.1.6 Controlling the flame

The burner flame can be set to two different modes with the mode switch:

- 1 = Automatic -modulating flame
- 2 = Low flame flame at lowest capacity (e.g. during inspection/maintenance)

6.1.7 Switch between gas and oil

Only for VGOI

Burner systems that are equipped with an oil pump or oil firing set can switch between gas and oil. For these systems, a fuel switch is added on the control panel.

To switch from gas to oil supply:

- 1. Set the mode switch to **Low** and wait until the burner is on low.
- 2. Set the control switch to **Off**.
- 3. Set the fuel switch to **0il**.
- 4. Change over the condenser flue gas valve to bypass the condenser.




- 5. Open all manual valves for the fuel supply at the:
 - Fuel tank
 - Burner
 - Oil pump or firing set
- 6. Set the control switch to **Manual**.
- After ignition, set the mode switch to Automatic.
 Make sure the boiler temperature is set to the required setting.

6.2 Frequency drive

The frequency drive is located next to the control panel and is used to control the motor of the burner fan. The frequency drive is operated via the interface in the top left corner.

NOTICE

The factory settings of the frequency drive have been set by Vitotherm.

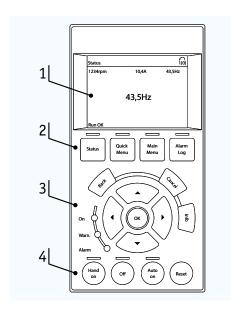

- 1. Graphical display with status information
- 2. Menu buttons and indicator LEDs
- 3. Navigation buttons and indicator LEDs
- 4. Operation buttons and indicator LEDs




For more information, please refer to the OEM manual.

6.3 Emergency shut down

Certain hazardous situations require an emergency shut down of the burner system (see §2.8).

To perform an emergency shut down:

- 1. Use the control switch on the control panel to close the fuel supply to the burner.
- 2. Use the manual emergency shut-off switch outside the boiler house to close the gas supply to the boiler house.
- 3. Use the fire switch outside the boiler house to cut off the power to the burner.

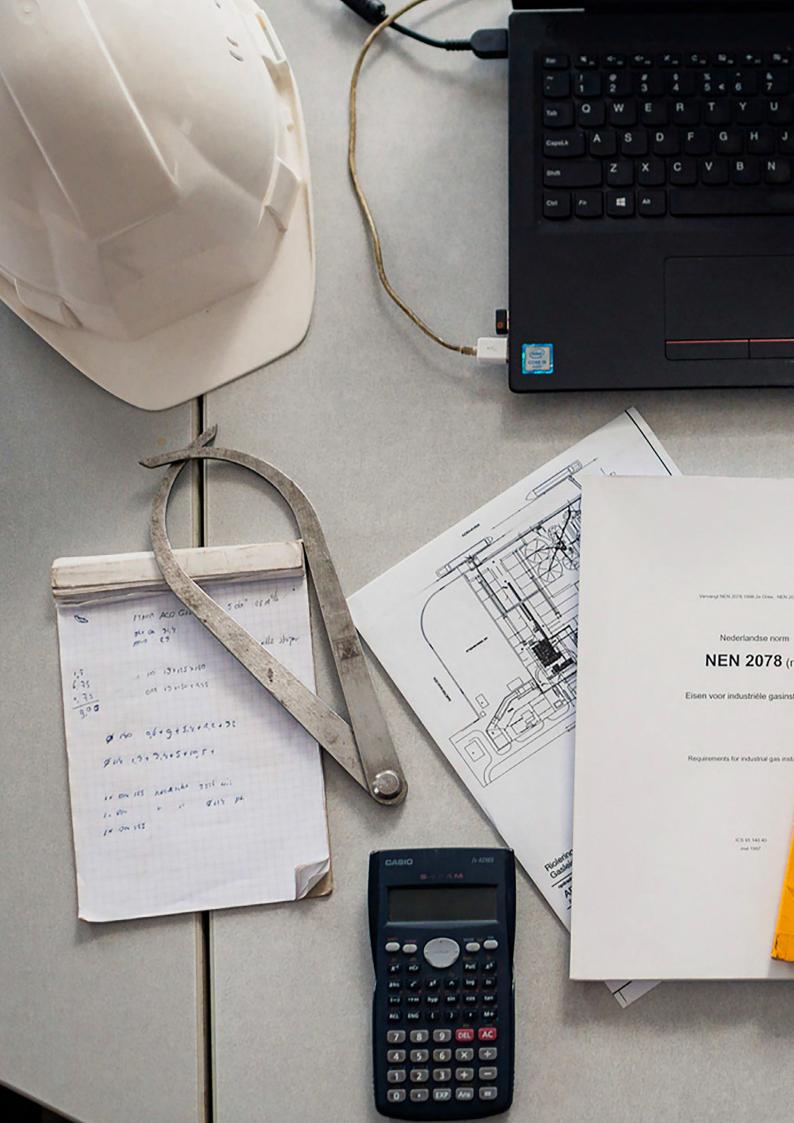



7 Troubleshooting

System failures are displayed on the interface of the control panel or frequency drive. The table below can be used to identify and solve the failure.



For more detailed information about these system failures, please refer to the OEM manual of the Etamatic operating system.

7.1 Left module

Description	Instructions			
Leak test (LT) failure	A leak is detected between the main or pilot gas valves. All valves must be checked by a specialist to identify the leaking valve. This valve must be replaced.			
Francisco de la control de Carlo de Car	Check the display of the frequency drive and read out the failure.			
Frequency controller failure	Use the OEM manual to solve the problem.			
Electronic low water level boiler failure	Check the water level of the boiler to see if the level is high enough.			
Low water level boiler failure	Remove any air in the system that may cause this problem.			
M 1 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Check the water temperature of the boiler.			
Max. boiler water temperature failure	Make sure that the water temperature inside the boiler is below the boiling point.			
Gas supply pressure too low (LD) failure	Check if the gas pressure to the burner corresponds with the required pressure			
Min. gas pressure (LD1) failure	mentioned on the burner plate (see §3.11). Adjust if necessary.			
	Check if there are any differences between the gas pressure regulator and the commissioned value.			
Max. gas pressure (HD) failure	Check if the maximum capacity has not been exceeded.			
	Adjust if necessary.			
Max. water temperature condenser	Check the water temperature of the condenser system.			
failure	Make sure that the condenser is below 95 $^{\circ}\text{C}$ and that the pump is running.			
Max. flue gas pressure condenser (HD eco) failure	Check the condenser or economiser for any flue gas blockage or leakage.			
Emergency stop	The emergency stop is engaged. Evaluate the situation and restart the burner.			
	Check the display of the frequency drive for failures.			
Min. air pressure (LD2) failure	Check the air intake for blockage.			
2 p. 2002210 (202), Tantal C	If the combustion air fan is still producing the needed pressure for the operation, compare the air pressure to the commissioned value. Adjust if necessary.			
Max. water pressure condenser failure	Check the water pressure in the heating system of the condenser.			
Thermal everlead oil nump	Check if the supply power corresponds with the value on the burner plate (see §3.11).			
Thermal overload oil pump	Make sure all the manual valves are open.			

7.2 Middle module

Description	Instructions				
Condensor bypass valve not open (ES OIL) failure	When switched over to emergency oil operation, check the condensor bypass valve. The bypass valve has to make sure that the flue gases are bypassed on the condensor to prevent blockage and corrosion when operating on oil.				
M:	Check the water level of the boiler system to see if the level is ok.				
Min. water boiler pressure failure	Remove any air in the system that can cause this problem.				
Max. water pressure boiler failure	Check the water pressure in the heating system of the boiler.				
	Check the flame scanner.				
Flame failure	Check the complete ignition.				
rtame raiture	Check the pilot and main gas valves.				
	Check the flame stability and combustion.				
CMC/ETAMATIC C DEM failure	Check the screen of the Lamtec burner control and read out the failure.				
CMS/ETAMATIC S OEM failure	Check the OEM manual of the burner control to solve the problem.				
CO ₂ chimney valve not closed (ES CO ₂) failure	Check if the ${\rm CO_2}$ fluegas valve in the chimney to the ${\rm CO_2}$ collector is closed during the start-up procedure of the burner.				



Notes	





8 Maintenance

8.1 Pre-emptive parts replacement schedule

Certain parts of the burner system should be replaced every X years to prevent failure of vital components. The table below gives an overview of these maintenance activities and the frequency with which they should be performed.

NOTICETwo sets of the most commonly replaced parts are available (see §3.10.5). To order these sets or other replacement parts, please contact Vitotherm or your supplier.

TI.		I	inter	val (<u>y</u>	years	5)		To be comited and by
Task	1	2	5	8	10	15	20	To be carried out by
Burner								
Ignition pins	•							
UV-cell		•						
Ignition cable		•						
Rajah clamps		•						
Pressure switch					•			
End switches					•			
Oil nozzles		•						
Sound insulation					•			
Flexible oil hoses			•					
Flexible connectors				•				
Gas valve train								
Pressure switch					•			
Actuators (Siemens SKP15)						•		
Actuators (Siemens SKP25)						•		
Pneumatic pressure hose (blue)		•						
Control panel								
Pneumatic timers					•			
Main power relay motor fan							•	
Interface relay					•			
Electronic timers					•			
Auxiliary relay					•			
VCD								
Pump		•						
CO sensor			•					
3-way valve			•					
Boiler / condenser								
HD condenser			•					
Maximum thermostat boiler				•				

8.2 Annual Periodic Maintenance

To guarantee the quality and safety of the burner system, Vitotherm advises annual Periodic Maintenance (PM) to be performed by their own certified service engineers.



To guarantee the quality and safety of the burner system, Vitotherm advises annual Periodic Maintenance (PM) to be performed by their own certified service engineers.



This section contains maintenance instructions for the standard components of a burner system. For maintenance instructions for any other (optional) components, please refer to the corresponding OEM manual.

A checklist of maintenance activities during Periodic Maintenance can be found in Appendix D of this manual.

8.2.1 Control panel

The following aspects of the control panel should be inspected:

- All electrical connections;
- The cables, for any sign of overload or burns;
- The circuit breaker fuses, for a correct rating;
- All switches and lights, for correct functioning;
- The cam timers, for correct functioning;
- The alarm display;
- The fuel interlocks.

8.2.2 Burner unit

To perform Periodic Maintenance on the burner unit, do the following:

- 1. Perform a visual check of all components for correct functioning.
- 2. Open the wind box and disassemble the combustor (see §8.3).
- 3. Clean and check:
 - the burner ignition system, including the HT lead and cap;
 - the igniters. Reset if necessary;
 - the condition of the atomizer cup, including concentricity;
 - the cup shroud. Ensure it is set correctly;
 - the splash wheel, for noise;
 - the primary air cashing, for any signs of oil;
 - the condition of the burner quarrel and flame baffle;
 - the flame control sensor (UV-cell or ionization probe).
- 4. Replace the ignition pins.



8.2.3 Moveable parts

The linkages and moveable parts of the burner system require the following maintenance activities:

- · Clean and check:
 - the operation of the linkage and cam unit, for wear free movement;
 - the modulation of the motor and clutch;
 - the operation of low and high fire micro switches;
 - the secondary air dampers, for free movement;
 - the primary air butterfly, for free movement.

8.2.4 Gas

For VGI and VGOI

- Check the gas supply to the burner for leaks and correct pressure;
- Check and test the gas train for correct functioning;
- Check the combustion performance for optimal efficiency for CO2 and heat output.
 - Adjust if necessary.

8.2.5 Oil

For VOI and VGOI

- Perform a visual check of:
 - the installation for oil leaks;
 - the wiring and connections;
 - the condition of flexible oil hoses (if applicable), replace every 5 years;
 - the oil meter.
- Check and test:
 - the solenoid valves for correct functioning;
 - the test block heater and trace heat tape for correct functioning;
 - the thermostat for operational oil temperature;
 - the oil for correct temperature and pressure.
- Check the combustion performance for optimal efficiency for CO2 and heat output.
 - Adjust if necessary.

8.2.6 Flue gas measurements

The concentration of the following gases in the flue gas must be measured and compared to the commissioning report:

- CO
- 02
- NOx

If the concentration of (one of) these gases differs from the values in the commissioning report, adjust back to the original settings.

8.3 Maintenance of the burner

This section provides information and instructions on how to perform maintenance on the DUO-block burner.

AWARNING

Make sure the burner system is completely shut down before performing maintenance on the burner:

- ▶ Use the control switch on the control panel to close the fuel supply to the burner.
- ▶ Interrupt the mains power supply to the burner system.

AWARNING

All mechanical screw connections (e.g. gas/oil line, flange connections, oil valves, electrical terminals) must be retightened prior to every Periodic Maintenance.



To guarantee the quality and safety of the burner system, Vitotherm advises annual Periodic Maintenance (PM) to be performed only by their own certified service engineers.

Required tools:

- · Ring wrenches or adjustable spanners
- Allen key (4 mm)

To perform maintenance on the **combustion air fan**:

- 1. Remove the soundproof motor cover.
- 2. Check the fan motor for any dirt or defects.
- 3. Check the sound material for defects and check if the sound material is still physically attached to the plate material.
- 4. Open the inspection hatch.
- 5. Check the fan for any dirt or defects.
- 6. Close the inspection hatch.
- 7. Remount the sound cover of the fan motor.



For more information regarding maintenance of the combustion air fan, please refer to the OEM manual.

To perform maintenance on the wind box and the combustor:

- 1. Disconnect the wind box to access the combustor:
 - a. Remove the bolts.
 - b. Remove the (small) locking pin.
 - c. Loosen the four clamps on the air inlet.
 - d. Slightly rotate the housing away from the combustor.
 - e. Disconnect the ignition cables.
 - f. Fully rotate the housing away from the combustor.




Your custom wind box may have an inspection hatch. This hatch can be opened and used to inspect the air valves and main combustor components, without disconnecting the wind box from the combustor.




- 2. Check if the air valves are clean and open smoothly.
 - Clean the valves and the axles if necessary.
- 3. Check the air pressure switch (LD2).
 - Clean the air pressure switch if necessary.
- 4. Check the following combustor components for any dirt or defects:
 - The air measure pipe
 - The UV cell
 - The pilot burner
 - The ignitors
 - The high voltage cable and the connectors for the ignitors
 - The combustor housing
 - If necessary, clean or replace the components above.

5. Disassemble the combustor:

- a. Remove the burner head locking bolt and the bracket it holds into place. Use a 17 mm ring wrench.
- b. Disconnect the air measure pipe. Use a 22 mm ring wrench.
- c. Remove the bracket that connects the pilot burner to the burner head. Use a 4 mm Allen key.
- d. Disconnect the oil lines (VOI and VGOI only). Use a 19 mm ring wrench.
- e. Pull out the UV cell.
- f. Disconnect the pilot gas pipe. Use a 22 mm ring wrench.

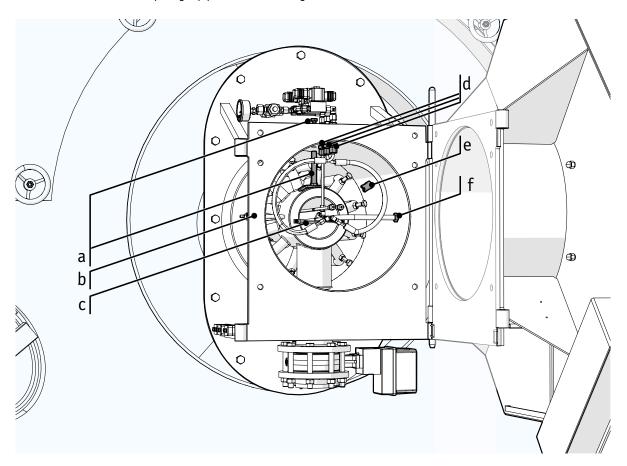


- $\ g. \quad \ \ \text{Disconnect and remove the complete pilot burner with oil lances and pilot gas line}$
- h. Lift the burner head out of the combustor.
- i. Remove the gasket.

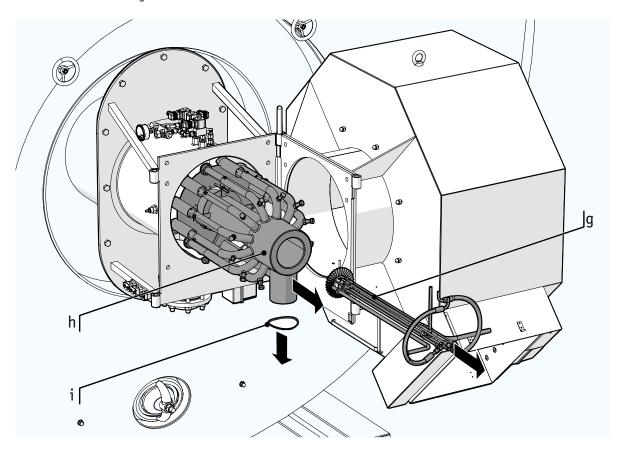

- 6. Check the following components of the burner head for any dirt or defects:
 - Burner head gasket
 - Flame plate and connections
 - Inner tube
 - Gas pipes
 - Mixer tubes
 - If necessary, clean or replace the components above.
- 7. Reassemble the combustor.
- 8. Close and reconnect the wind box.



Notes	

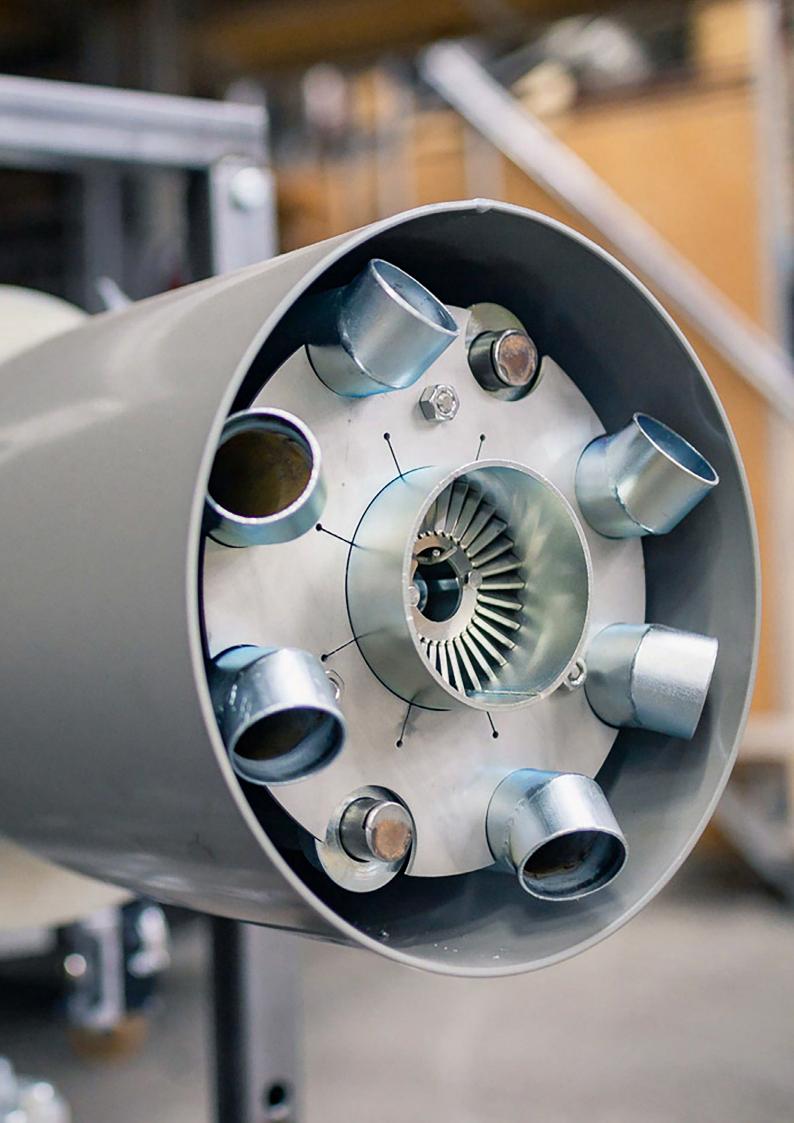



9 Decommissioning and disposal

This section contains instructions and information on how to properly decommission and dispose of the burner.



The burner system may only be installed by qualified personnel. Handling the burner unit and supporting components without the required knowledge and experience may damage the burner system or cause hazardous situations during installation and use.

9.1 Decommissioning

To decommission the burner system:

- 1. Use the control switch on the control panel to switch the burner off.
- 2. Close the gas and oil supply to the burner.
- 3. Cut off the power to the burner.

9.2 Dismantling the burner

Required tools:

- Mobile crane with adequate lifting capacity.
- Ring wrenches or adjustable spanners.
- To dismantle the burner:
- 1. Disconnect the cabling from the:
 - a. Combustion air fan
 - b. Wind box & combustor
 - c. Gas train
 - d. Control panel
 - e. Boiler thermostat set
- 2. Disconnect the wind box
- 3. Disconnect the oil supply line from the combustor.

- Suitable hoisting equipment:
 - D-shackles
 - Round sling
- 4. Disconnect the gas line adapter from the combustor.
- 5. Remove the combustor from the boiler.
- 6. Remove the combustion air fan.
- 7. Remove the boiler thermostat set.
- 8. Remove the Vitopack.

or

Remove the control panel and gas train.

9.3 Disposal



Separate and dispose the components of the burner into the applicable waste streams based on their material, in accordance with local regulations.



All structural components of a Vitotherm automatic forced draught burner are made of powder-coated steel and should be disposed of accordingly.



For more information on how to properly dispose of supplier parts, please refer to the OEM manual.





10 Transport and storage

This section contains instructions and information on how to properly transport and store the burner.

10.1 Transport

When transporting the components of the burner system separately, use suitable hoisting or lifting equipment.




Heavy objects such as the wind box, combustion air fan or combustor may drop, rotate or topple when transported incorrectly.

- ► Use suitable lifting or hoisting equipment.
- ▶ Make sure no personnel is below or near the object when lifting or hoisting.


10.1.1 Wind box

The wind box is equipped with a single hoisting ring on the top of the casing.

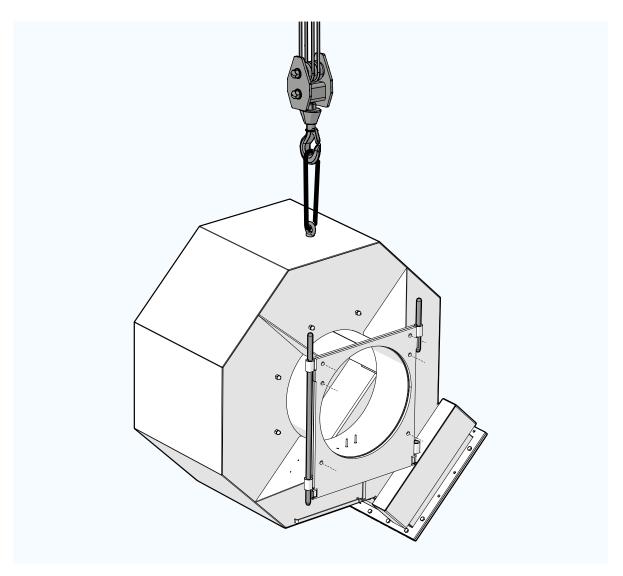

10.1.2 Combustion air fan


The combustion air fan is equipped with two holes, located above the centre of gravity. These holes can be used to attach D-shackles and round slings to hoist the housing.

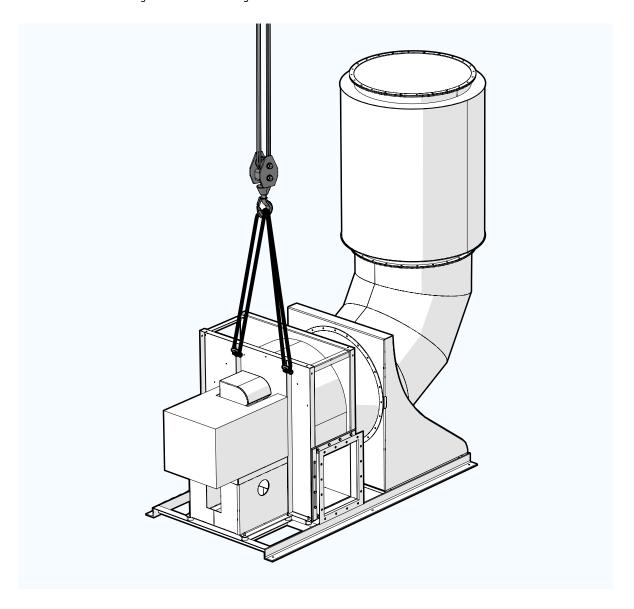



10.1.3 Combustor

The combustor can be lifted with a hoisting sling. This sling should be attached to the housing of the combustor, between the flange and the back plate.

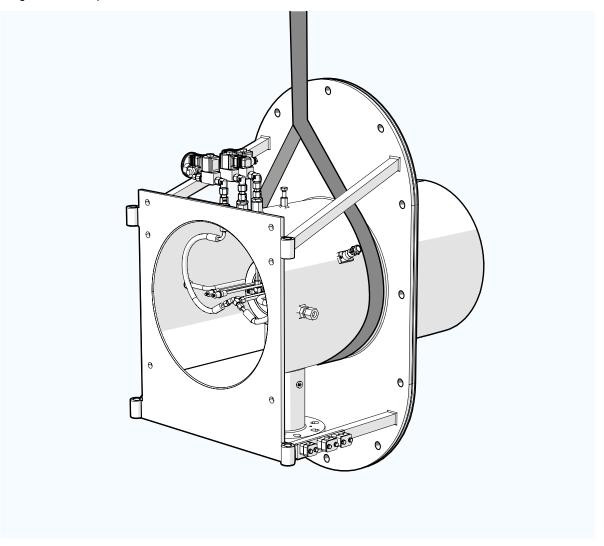


AWARNING

Slings might shift due to hoisting movements, causing unforeseen movement or toppling of the combustor.

- ▶ Make sure that the sling is trapped in the combustor construction and cannot slide off.
- ▶ Do not attach slings to the open front section of the combustor, where the sling might slide off, or to the reinforcement bars.

10.1.4 Vitopack

The Vitopack is equipped with two holes at the top of the frame. These holes can be used to attach D-shackles and round slings to hoist the installation.

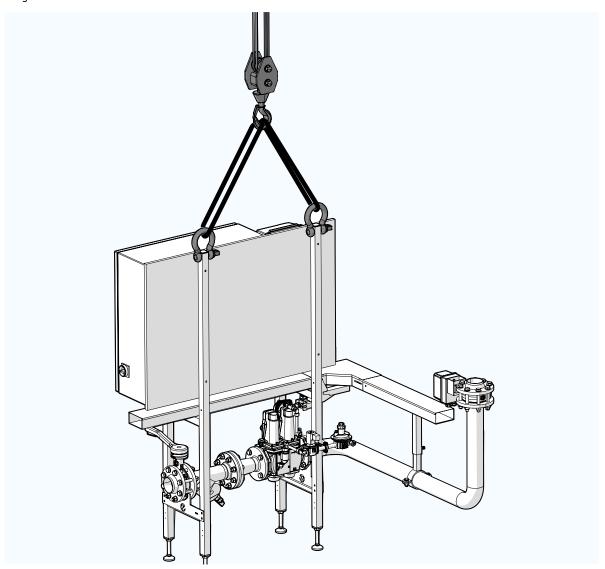

10.2 Storage

ACAUTION


The steel components of the burner are sensitive to corrosion damage.

- ► Always store the burner in a dry, indoor location.
- ▶ Do not unpack the burner from the crate until you are ready to install it.



Appendices

A Burner system overview

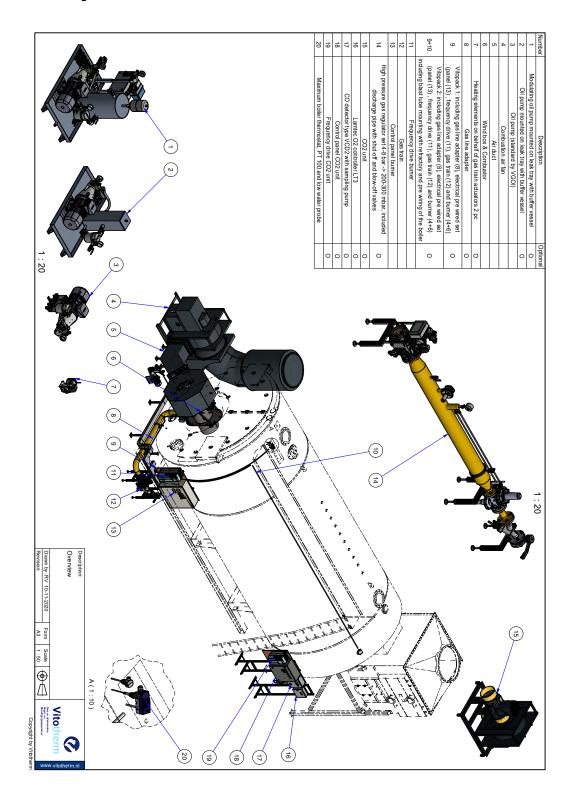

B Declaration of conformity



		Declar	ation (of con	formit	У		
Manufacturer:	VITOTHERM	B.V.						
Adress:	Overgauwse	weg 8						
	2641NE Pijna	acker						
Products:	Force draft b	ourners						
Туре:	VITOTHERM	B.V. burner t	ypes:					
Gas burners:	VGIs-100	VGIs-150	VGIs-200	VGIs-250	VGIs-300	VGIs-350	VGIs-400	VGIs-450
	VGIs-500	VGIs-600	VGIs-700	VGIs-800	VGIs-1000	VGIs-1250	VGIs-1500	
Gas/oil burner:	VGOIs-100	VGOIs-150	VGOIs-200	VGOIs-250	VGOIs-300	VGOIs-350	VGOIs-400	VGOIs-450
	VGOIs-500	VGOIs-600	VGOIs-700	VGOIs-800	VGOIs-1000	VGOIs-1250	VGOIs-1500	
Oil burner:	VOIs-100	VOIs-150	VOIs-200	VOIs-250	VOIs-300	VOIs-350	VOIs-400	VOIs-450
	VOIs-500	VOIs-600	VOIs-700	VOIs-800	VOIs-1000	VOIs-1250	VOIs-1500	
Fuels:	Natural gas		LPG	LNG	BIO-gas	Light oil	BIO-oil	
	The suitabilit	ty of fuels of d	ifferent quality	must be conf	irmed in advan	ce by VITOTHI	ERM B.V.	
Applications:	VITOTHERM	BURNERS are	suitable for in	ntermittent fir	ing and contin	uous firing on	:	
				and indirect fi				
	Steam Boiler	`S						
	Air Heaters o	direct and indi	rect fired					
	Process appl	ications						
Standards:	Mentioned p	oroducts are i	n compliance v	with the follow	ving technical s	tandards:		
	EN 267		-					
	EN 676							
	EN 746							
Directives:	Mentioned p	oroducts are a	ccording the f	ollowing Euro	pean directives	::		
	GAR 2016-42	26-EU						
	MD 2006-42	-EG						
	PED 2014-68	B-EU						
	EMC 2014-3	0-EU						
	LVD 2014-35	5-EU						
	CE-PIN 2009	/142/EC						
NOx emission	VITOTHERM	B.V. declares	that the men	tioned Produc	ts comply with	the following	standards:	
	BEMS				•			
	1. BImSchV							
	NOx class 3							
Protection class IP:	Degree of pr	otection						
	IP54	IP - EN 6052	9					
Marking of type plate:	The burners	are labelled v	vith:					
0	CE mark							
	CE Pin nr							
		n No. of Notifi	ed Body					
	EAC		,					



C Performance data (Imperial)

DUO-block low NOx gas burner

	Boiler capacity (n=93%)	Burner input	Control	Gas pressure	Max. boiler backpressure	Motor / drive power	Turn down	Consumption	Max. height
Туре	HP	MMBTU	Gas	PSI	"wc	HP	Gas	Gas (ft³)	ft
VGIs-100	119	4	Modulating	1,45-4,35	4.0	3.0	1:5	4319	1640
VGIs-150	178	6	Modulating	1,45-4,35	4.0	5.4	1:5	6479	1640
VGIs-200	237	9	Modulating	1,45-4,35	4.0	5.4	1:5	8639	1640
VGIs-250	296	11	Modulating	1,45-4,35	4.0	7.5	1:5	10798	1640
VGIs-300	356	13	Modulating	1,45-4,35	4.8	10.2	1:6	12958	1640
VGIs-350	415	15	Modulating	1,45-4,35	4.8	10.2	1:6	15118	1640
VGIs-400	474	17	Modulating	1,45-4,35	4.8	15.0	1:6	17277	1640
VGIs-450	534	19	Modulating	1,45-4,35	4.8	15.0	1:6	19437	1640
VGIs-500	593	21	Modulating	1,45-4,35	4.8	20.4	1:7	21597	1640
VGIs-600	711	26	Modulating	1,45-4,35	5.2	25.2	1:7	25916	1640
VGIs-700	830	30	Modulating	2,90-4,35	5.6	29.9	1:8	30235	1640
VGIs-800	948	34	Modulating	4.35	6.0	40.8	1:8	34554	1640
VGIs-1000	1186	43	Modulating	4.35	6.0	50.4	1:10	43193	1640
VGIs-1250	1423	51	Modulating	4.35	6.0	61.2	1:10	51832	1640
VGIs-1500	1779	64	Modulating	4.35	6.0	74.9	1:10	64790	1640
VGIs-1500	1921	68	Modulating	4.35	6.0	102.1	1:10	69109	1640
VGIs-1500	2075	75	Modulating	4.35	6.0	122.5	1:12	76020	1640
VGIs-1500	2253	82	Modulating	4.35	6.0	149.7	1:12	82931	1640
VGIs-1500	2549	92	Modulating	4.35	6.0	179.7	1:12	93297	1640

DUO-block low NOx gas & emergency back-up oil burner

	Boiler capacity	Burner			Gas	Max boiler backpressure	Motor/drive power			Consum	ption	Max.
	(n=93%)	input	Contro	ol	pressure	iler ure	/drive power	Turn c	lown	Gas	0il	height
Туре	НР	MMBTU	Gas	Oil	PSI	"wc	НР	Gas	0il	(ft³)	(kg/h)	ft
V(G)0Is-100	119	4	Mod.	2-stage	1,45-4,35	4.0	3.0	1:5	1:2	4319	84	1640
V(G)0Is-150	178	6	Mod.	2-stage	1,45-4,35	4.0	5.4	1:5	1:2	6479	126	1640
V(G)0Is-200	237	9	Mod.	2-stage	1,45-4,35	4.0	5.4	1:5	1:2	8639	168	1640
V(G)0Is-250	296	11	Mod.	2-stage	1,45-4,35	4.0	7.5	1:5	1:2	10798	210	1640
V(G)0Is-300	356	13	Mod.	2-stage	1,45-4,35	4.8	10.2	1:6	1:2	12958	252	1640
V(G)0Is-350	415	15	Mod.	2-stage	1,45-4,35	4.8	10.2	1:6	1:2	15118	294	1640
V(G)0Is-400	474	17	Mod.	2-stage	1,45-4,35	4.8	15.0	1:6	1:2	17277	336	1640
V(G)0Is-450	534	19	Mod.	2-stage	1,45-4,35	4.8	15.0	1:6	1:2	19437	378	1640
V(G)0Is-500	593	21	Mod.	2-stage	1,45-4,35	4.8	20.4	1:7	1:2	21597	420	1640

	Boiler capacity (n=93%)	Burner input	Contro	.1	Gas pressure	Max boiler backpressure	Motor/drive power	Turn d	lown	Consum	ption Oil	Max. height
Туре	HP	MMBTU	Gas	Oil	PSI	"wc	HP	Gas	Oil	(ft³)	(kg/h)	ft
V(G)0Is-600	711	26	Mod.	2-stage	1,45-4,35	5.2	25.2	1:7	1:2	25916	504	1640
V(G)0Is-700	830	30	Mod.	2-stage	2,90-4,35	5.6	29.9	1:8	1:2	30235	588	1640
V(G)0Is-800	948	34	Mod.	2-stage	4.35	6.0	40.8	1:8	1:2	34554	672	1640
V(G)0Is-1000	1186	43	Mod.	2-stage	4.35	6.0	50.4	1:10	1:2	43193	840	1640
V(G)0Is-1250	1423	51	Mod.	2-stage	4.35	6.0	61.2	1:10	1:2	51832	1008	1640

DUO-block low NOx gas & long term oil dual fuel burner

						Max.						
	Boiler					boiler	Motor			Consun	nption	
	capacity	Burner			Gas	back-	/ drive					Max.
	(n=93%)	input	Contr	ol	pressure	pressure	power	Turn o	lown	Gas	Oil	height
Туре	НР	MMBTU	Gas	0il	PSI	"wc	HP	Gas	0il	(ft³)	(kg/h)	ft
V(G)0Is-100	119	4	Modul	lating	1,45-4,35	4.0	3.0	1:5	1:5	4319	105	1640
V(G)0Is-150	178	6	Modul	lating	1,45-4,35	4.0	5.4	1:5	1:5	6479	158	1640
V(G)0Is-200	237	9	Modul	lating	1,45-4,35	4.0	5.4	1:5	1:5	8639	210	1640
V(G)0Is-250	296	11	Modul	lating	1,45-4,35	4.0	7.5	1:5	1:5	10798	263	1640
V(G)0Is-300	356	13	Modul	lating	1,45-4,35	4.8	10.2	1:6	1:5	12958	315	1640
V(G)0Is-350	415	15	Modul	lating	1,45-4,35	4.8	10.2	1:6	1:5	15118	368	1640
V(G)0Is-400	474	17	Modul	lating	1,45-4,35	4.8	15.0	1:6	1:5	17277	420	1640
V(G)0Is-450	534	19	Modul	lating	1,45-4,35	4.8	15.0	1:6	1:5	19437	473	1640
V(G)0Is-500	593	21	Modul	lating	1,45-4,35	4.8	20.4	1:7	1:5	21597	525	1640
V(G)0Is-600	711	26	Modul	lating	1,45-4,35	5.2	25.2	1:7	1:5	25916	630	1640
V(G)0Is-700	830	30	Modul	lating	2,90-4,35	5.6	29.9	1:8	1:5	30235	735	1640
V(G)0Is-800	948	34	Modul	lating	4.35	6.0	40.8	1:8	1:5	34554	840	1640
V(G)0Is-1000	1186	43	Modul	lating	4.35	6.0	50.4	1:10	1:5	43193	1050	1640
V(G)0Is-1250	1423	51	Modul	lating	4.35	6.0	61.2	1:10	1:5	51832	1261	1640
V(G)0Is-1500	1779	64	Modul	lating	4.35	6.0	74.9	1:10	1:5	64790	1576	1640
V(G)0Is-1500	1921	68	Modul	lating	4.35	6.0	102.1	1:10	1:5	69109	1681	1640
V(G)0Is-1500	2075	75	Modul	lating	4.35	6.0	122.5	1:12	1:5	76020	1849	1640
V(G)0Is-1500	2253	82	Modul	lating	4.35	6.0	149.7	1:12	1:5	82931	2017	1640
V(G)0Is-1500	2549	92	Modul	lating	4.35	6.0	179.7	1:12	1:5	93297	2269	1640



DUO-block modulating light fuel oil burner

	Boiler			Mar Latter	Malani	_	0.1	
	capacity (n=93%)	Burner input	Control	Max. boiler backpressure	Motor / drive power	Turn down	Oil consumption	Max. height
Туре	HP	MMBTU	Oil	"WC	HP	Oil	kg/h	ft
V(G)0Is-100	119	4	Modulating	4.0	3.0	1:5	105	1640
V(G)0Is-150	178	6	Modulating	4.0	5.4	1:5	158	1640
V(G)0Is-130	237	9	Modulating	4.0	5.4	1:5	210	1640
V(G)0Is-250	296	11	Modulating	4.0	7.5	1:5	263	1640
V(G)0Is-230	356	13	Modulating	4.8	10.2	1:5	315	1640
V(G)0Is-350	415	15	Modulating	4.8	10.2	1:5	368	1640
V(G)0Is-400	474	17	Modulating	4.8	15.0	1:5	420	1640
V(G)0Is-450	534	19	Modulating	4.8	15.0	1:5	473	1640
V(G)0Is-500	593	21	Modulating	4.8	20.4	1:5	525	1640
V(G)0Is-600	711	26	Modulating	5.2	25.2	1:5	630	1640
V(G)0Is-700	830	30	Modulating	5.6	29.9	1:5	735	1640
V(G)0Is-800	948	34	Modulating	6.0	40.8	1:5	840	1640
V(G)0Is-1000	1186	43	Modulating	6.0	50.4	1:5	1050	1640
V(G)0Is-1250	1423	51	Modulating	6.0	61.2	1:5	1261	1640
V(G)0Is-1500	1779	64	Modulating	6.0	74.9	1:5	1576	1640
V(G)0Is-1500	1921	68	Modulating	6.0	102.1	1:5	1681	1640
V(G)0Is-1500	2075	75	Modulating	6.0	122.5	1:5	1849	1640
V(G)0Is-1500	2253	82	Modulating	6.0	149.7	1:5	2017	1640
V(G)0Is-1500	2549	92	Modulating	6.0	179.7	1:5	2269	1640

DUO-block dual fuel low NOx natural gas & propane gas burner

	Boiler capacity (n=93%)	Burner input	Control	Gas pressure	Max. boiler backpressure	Motor / drive power	Turn down	Consumption	Max. height
Туре	HP	MMBTU	Gas	PSI	"wc	HP	Gas	Gas (ft³)	ft
VGIs-100	119	4	Modulating	1,45-4,35	4.0	3.0	1:5	4319	1640
VGIs-150	178	6	Modulating	1,45-4,35	4.0	5.4	1:5	6479	1640
VGIs-200	237	9	Modulating	1,45-4,35	4.0	5.4	1:5	8639	1640
VGIs-250	296	11	Modulating	1,45-4,35	4.0	7.5	1:5	10798	1640
VGIs-300	356	13	Modulating	1,45-4,35	4.8	10.2	1:6	12958	1640
VGIs-350	415	15	Modulating	1,45-4,35	4.8	10.2	1:6	15118	1640
VGIs-400	474	17	Modulating	1,45-4,35	4.8	15.0	1:6	17277	1640
VGIs-450	534	19	Modulating	1,45-4,35	4.8	15.0	1:6	19437	1640
VGIs-500	593	21	Modulating	1,45-4,35	4.8	20.4	1:7	21597	1640
VGIs-600	711	26	Modulating	1,45-4,35	5.2	25.2	1:7	25916	1640
VGIs-700	830	30	Modulating	2,90-4,35	5.6	29.9	1:8	30235	1640

	Boiler capacity (n=93%)	Burner input	Control	Gas pressure	Max. boiler backpressure	Motor / drive power	Turn down	Consumption	Max. height
Туре	HP	MMBTU	Gas	PSI	"wc	HP	Gas	Gas (ft³)	ft
VGIs-800	948	34	Modulating	4.35	6.0	40.8	1:8	34554	1640
VGIs-1000	1186	43	Modulating	4.35	6.0	50.4	1:10	43193	1640
VGIs-1250	1423	51	Modulating	4.35	6.0	61.2	1:10	51832	1640
VGIs-1500	1779	64	Modulating	4.35	6.0	74.9	1:10	64790	1640
VGIs-1500	1921	68	Modulating	4.35	6.0	102.1	1:10	69109	1640
VGIs-1500	2075	75	Modulating	4.35	6.0	122.5	1:12	76020	1640
VGIs-1500	2253	82	Modulating	4.35	6.0	149.7	1:12	82931	1640
VGIs-1500	2549	92	Modulating	4.35	6.0	179.7	1:12	93297	1640

DUO-block tri-fuel low NOx natural gas, propane gas & modulating light fuel oil burner


	Boiler capacity (n=93%)	Burner input	Contr	ol	Gas pressure	Max. boiler back-pressure	Motor / drive power	Turn o	lown	Consum	ıption	Max. height
			_					_		Gas	0il	_
Туре	HP	MMBTU	Gas	0il	PSI	"wc	HP	Gas	Oil	(ft³)	(kg/h)	ft
V(G)0Is-100	119	4	Modu	lating	1,45-4,35	4.0	3.0	1:5	1:5	4319	105	1640
V(G)0Is-150	178	6	Modu	lating	1,45-4,35	4.0	5.4	1:5	1:5	6479	158	1640
V(G)0Is-200	237	9	Modu	lating	1,45-4,35	4.0	5.4	1:5	1:5	8639	210	1640
V(G)0Is-250	296	11	Modu	lating	1,45-4,35	4.0	7.5	1:5	1:5	10798	263	1640
V(G)0Is-300	356	13	Modul	lating	1,45-4,35	4.8	10.2	1:6	1:5	12958	315	1640
V(G)0Is-350	415	15	Modul	lating	1,45-4,35	4.8	10.2	1:6	1:5	15118	368	1640
V(G)0Is-400	474	17	Modul	lating	1,45-4,35	4.8	15.0	1:6	1:5	17277	420	1640
V(G)0Is-450	534	19	Modul	lating	1,45-4,35	4.8	15.0	1:6	1:5	19437	473	1640
V(G)0Is-500	593	21	Modul	lating	1,45-4,35	4.8	20.4	1:7	1:5	21597	525	1640
V(G)0Is-600	711	26	Modul	lating	1,45-4,35	5.2	25.2	1:7	1:5	25916	630	1640
V(G)0Is-700	830	30	Modul	lating	2,90-4,35	5.6	29.9	1:8	1:5	30235	735	1640
V(G)0Is-800	948	34	Modul	lating	4.35	6.0	40.8	1:8	1:5	34554	840	1640
V(G)0Is-1000	1186	43	Modul	lating	4.35	6.0	50.4	1:10	1:5	43193	1050	1640
V(G)0Is-1250	1423	51	Modul	lating	4.35	6.0	61.2	1:10	1:5	51832	1261	1640
V(G)0Is-1500	1779	64	Modul	lating	4.35	6.0	74.9	1:10	1:5	64790	1576	1640
V(G)0Is-1500	1921	68	Modul	lating	4.35	6.0	102.1	1:10	1:5	69109	1681	1640
V(G)0Is-1500	2075	75	Modul	lating	4.35	6.0	122.5	1:12	1:5	76020	1849	1640
V(G)0Is-1500	2253	82	Modul	lating	4.35	6.0	149.7	1:12	1:5	82931	2017	1640
V(G)0Is-1500	2549	92	Modul	lating	4.35	6.0	179.7	1:12	1:5	93297	2269	1640



D Checklist Periodic Maintenance

		Vitotherm B.V.	Location name:				
		Overgauwseweg 8	Burner type:				
		2641 NE Pijnacker	Serial number:				
17:1 - 1		tel: +31153694757	Customer reference:				
VITOT	herm	Netherlands	Excecuted by (name):				
		www.vitotherm.nl	Date:				
	General preventive gui	delines (M&E) for a Vitotherm	burner installation	on a ho	t water boiler		
Control panel	Check status Burner flame con	troller unit	Burner unit	Check all	components are sure		
	Check status flame amplifier			Check bu	rner ignition system		
	Check if copy of the program is				d clean igniters, replace if required		
	Check visual of electrical conne				ndition of burner head		
	Check cables for any sign of ov	-		Check co	ectors on condition		
	Check fuses circuit breakers ra Check for correct operation of	-			lean oil nozzles		
	Check operation of alarms on p				ition transformer		
	Check switch computer funtions	al or manual use burner		Check an	d clean UV / IR scanner		
	Check fuel interlocks		Motor	Check an	d clean wheel		
Air transport	Check modulation motor air dar	The state of the s		Check an	d clean air intake		
	Check free movement of air da	mpers			emove status soundproofing material		
	Check and clean air dampers				arings (noise and flexibility)		
Convertor	Check display function		Gastrain		PM sensor, mounting correct ?		
Converter	Check display function Check if copy of settings is made	do.	Gastrain	_	neral status gas train eration of gas train		
Measuring nipples closed	Checked ?				utters and components for leak		
	S.I.JORGU :				ot valves on function		
					ain valves on function		
				Check Le			
High pressure Gas	Check if pressure output is state	ole		-	mbar		
regulator	Check Pressure relief setting a	nd status		-	mbar		
	Check Pressure exhaust setting	and status		-	mbar		
Pressure switches	Check LD Minimum gas pressu	re switch before gas valves		-	mbar		
	Check LD1 minimum gas press	-		-	mbar		
	Check LD2-L Air pressure swite			-	mbar		
	Check LD2-H Air pressure swit			-	mbar		
	Check LT Leaktest control swite Check HD maximum gas press		1	-	mbar mbar		
		as pressure switch after gas valves		-	mbar		
Switches (if pressent)	Check ES-1 next to butterfly ga				Setting < 10% closed position		
Owitches (ii pressent)	Check ES-2 in to the main gas			-	Setting < 2% above closed position		
	Check ES-3 next to the air dam			-	Setting < 90% open position		
	Check ES-4 next to the air dam			-	Setting < 10% closed position		
Boiler safety switches	Check Maximum boiler tempera	ature thermostat			Setting < 110 °C		
	Check Minimum liquid level swi	tch (low water probe)			resistent Ω		
	Check Maximum boiler pressur				Setting < 3 Bar		
	Check Minimum boiler pressure				Setting > 0,2 Bar		
	Check Shuntpump is running at						
CO2	Check visual valve motor condi	tion					
	Check valve connection okay?	the fem?					
Temperature safety	Check pipes connected well on Check Maximum temperature (Setting < 65°C		
Pressure switch	Check LD2-CO2 Air pressure s			-	mbar		
Switches (if pressent)	Check Valve not closed ES6				Setting < 15% closed position		
CO detection	Check for correct operation and	I status			·		
	Check pump operation						
	Check sensor with 100 ppm CC) gas					
	Check pump pressure switch						
Condensor	Check if condensation tray is cl	ean					
	Check if drain pipe is clean		4				
Town evel we differ	Check if damper is movable	andanas	 		Catting 4 05°C		
Temperature safety Pressure switch	Check HD condensor maximum	n pressure switch by condensor	-	_	Setting < 95°C mbar		
i ressure switch	Check Pump running at burner				IIII		
Oil	Check oilpump visual on status						
	Check for leaks	and rathing	1				
	Check filter is clean		1				
	Check operation of solenoid val		<u></u>		<u></u>		
Pressure switches (if presser				-	bar		
0 11 11 111	Check Minimum oil pressure sv			-	bar		
Switches (if present)	Check ES condensor valve pos	ition oil	Dia	ocking oil f	Setting < 85% open;		
Fl	Object to OO		Blo	ANIIY OII TU	nction when chimney not open		
Flue gas emmissions	Check O2		 		>< %		
	Check CO Check NOx		 		< ppm < ppm		
	Check flue gas temperature				< °C		
Notes:	5		•		<u>-</u>		
110.63.							
	1						
-	ļ						

E Ignition electrodes spacing

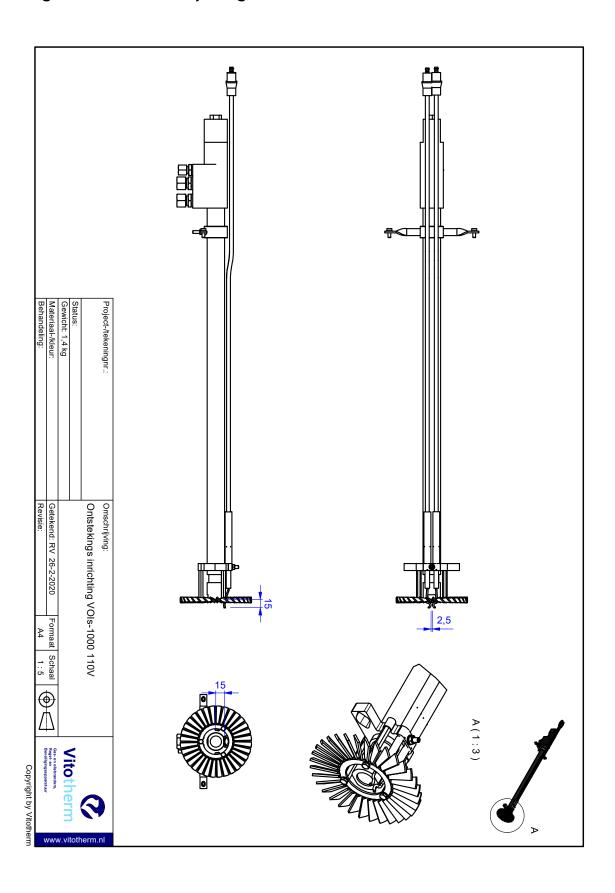



Vitotherm BV

Overgauwseweg 8

2641 NE Pijnacker

T (+31) 015 369 47 57

info@vitotherm.nl

www.vitotherm.nl

